


Installation Instructions

Spartex - Automatic Lubricator

Read before using!

please follow these 4 simple steps for trouble-free operation

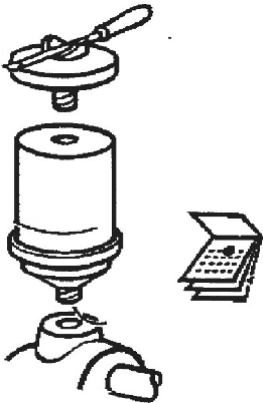

1. **Screw in the starter cap by hand & tighten down firmly (you will hear the seals break while doing this). Use a screw driver or similar to tighten completely.**
2. **Record change over date.**
3. **Pre-grease bearing before first installation.**
4. **Install unit hand tight into grease point.**

! Do NOT open ! Do NOT remove until the change over date !

- Designed to operate at an average environmental temperature of 25° C. Refer to brochure for information about using at different temperatures. Allow 8 - 40 hours for operation to commence depending on type.
- If the unit is to be installed with extension lines, use min. 8 mm D tubing. The maximum recommended length are 1,5 metres.
- Do not screw the starter cap into the unit until ready to activate it.
- If fittings are required, refer to our list of accessories.
- Wear protective gloves when activating and installing the unit.
- Dispose of used units in the industrial waste bin.

COLOUR CODES: Colour of the activator in the base of the unit and the starter cap

White:	1 month unit	Spartex 735599
Blue:	3 months unit	Spartex 735600
Red:	6 months unit	Spartex 735601
Grey:	12 months unit	Spartex 735602

 **Note: colour of starter cap must match colour of activator in base of the unit**

WARNING: The unit uses a small quantity of potassium hydroxide as part of it's operation. If it is opened or accidentally damaged and the liquid escapes onto the skin or eyes, wash with water and seek medical advice. Refer to material safety data sheet.

This automatic lubricator is a quality product according to the German safety regulations of appliances and is proofed among other things corresponding to the specifications PPP 52007A:1996, TRGS 220:2011.