Series TM Multiple Tubing Holder

Can be separated at any position depending on the number of tubes. Manufactured from flame resistant resin (Equivalent to UL-94 Standards V-0).

 


| Applicable | Model | Number of tubing (MAX.) | | | Accessory: Phillips countersunk tapping screw | | |
|-------------|-------|-------------------------|---|----|---|------------------|--|
| Tubing O.D. | Model | 6 | 8 | 12 | Size: Nominal size X length | Number of pieces | |
| 4 | TM-04 | | | | 2 X 6 | 4 | |
| 6 | TM-06 | | | | 2.6 X 8 | | |
| 8 | TM-08 | | • | | 2.0 \ 0 | | |
| 10 | TM-10 | | | | 3 X 8 | | |
| 12 | TM-12 | • | | | 3 / 0 | | |

How To Use

$ilde{\mathbb{\Lambda}}$ Caution

The multiple tubing holder can be cut apart according to the number of tubes to be connected.





- Cut the multiple tubing holder at a desired position and mount it on the equipment with the attached phillips countersunk tapping screws.
- **3.** Align the tube with the holding position and push down to fit into the holding part.
- **4.** Pull tubing up to remove it from the holder.

Series TG Tube Releasing



| Part No. | Applicab | le Tube Size | Applicable Tube Material | Color | Weight |
|----------|-------------|--------------|--------------------------|-------|--------|
| TG-1 | Metric size | ø4, ø6 | Nylon, Soft Nylon | Blue | 33g |
| TG-2 | Inch size | ø1/8", ø1/4" | Polyurethane | Red | Joy |


- Aids in the connection and removal of tubing in applications where One-touch™ fittings are located close together, such as on a valve manifold.
- ▲ Easy one handed operation.
- Available for two sizes of applicable tubes. Easy exchange with one touch.

How To Use

riangle Caution

Process

Put the end of tool into the release bushing parallel to the tube.

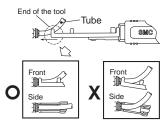



After inserting, grasp the handle tightly and insert the end of the tube to the stroke end.

Note) Insert firmly to guard against accidental tube release.

Size Change

  Push both sides at once to release. Reversed and fixed at the same position as before. Applicable tube size is indicated on the back side.





After inserting end of tube, relax your grip on the tool. Returning force of spring releases the tube.