

How to Order

VH 2 4 1 - 02 - - -

• Hand valve

• Body size (Base size)

2	1/4 base
3	3/8 base
4	1/2 base
6	1 base

• Made to Order

Nil	Standard
X116	Handle (Red)

• Suffix symbol

Symbol	Description	Body size			
		VH2	VH3	VH4	VH6
Nil	Standard	●	●	●	●
L	Long handle	—	●	●	—
R	Handle position 180° change	●	●	●	●

* When specifying more than one option, indicate symbols alphabetically.
* Note that 1(P) port of VH600 is located on handle side as standard.

• Piping/Mounting

Symbol	Mounting method	Piping			
		VH2	VH3	VH4	VH6
0	Body				
1	Panel mount				
2	Body				—
3	Panel mount				—
4	Body		—	—	—
5	Panel mount		—	—	—

Note) For VH600, 3(R) port is located only on the bottom.

• Port size (Nominal size)

Symbol	Port size (Nominal size)	Body size			
		VH2	VH3	VH4	VH6
02	1/4	●	●	●	—
03	3/8	—	●	●	—
04	1/2	—	—	●	—
06	3/4	—	—	●	—
10	1	—	—	—	●

• Thread type

 
Nil	Rc
N	NPT
F	G

• Function


0	3 position closed center
1	3 position exhaust center
2	2 position

Symbol


2 position



Closed center

 


Exhaust center

 

Handle Operation Angle and Air Flow Direction

(Refer to the figures of piping direction to the right.)

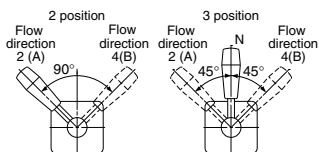

Flow Rate Characteristics

