

## ERGO™ handle, reamer

ergo®



### BE-8980

| 6 | 100 | 27 | 122 | 5 | BE-8980 |
|---|-----|----|-----|---|---------|

## ERGO™ nut drivers

ergo®



### BE-6400M

| 4   | 100 | 20 | 122 | 5 | BE-6400M-4   |
|-----|-----|----|-----|---|--------------|
| 5   | 100 | 20 | 122 | 5 | BE-6400M-5   |
| 5.5 | 100 | 20 | 122 | 5 | BE-6400M-5.5 |
| 7   | 100 | 20 | 122 | 5 | BE-6400M-7   |

## ERGO™ nut drivers, long bore

ergo®



### BE-78

| 3   | 125 | 20 | 122 | 5 | BE-7803 |
|-----|-----|----|-----|---|---------|
| 3.5 | 125 | 20 | 122 | 5 | BE-7835 |
| 4   | 125 | 20 | 122 | 5 | BE-7804 |
| 4.5 | 125 | 20 | 122 | 5 | BE-7845 |
| 5   | 125 | 20 | 122 | 5 | BE-7805 |
| 5.5 | 125 | 20 | 122 | 5 | BE-7855 |
| 6   | 125 | 20 | 122 | 5 | BE-7806 |
| 7   | 125 | 27 | 122 | 5 | BE-7807 |
| 8   | 125 | 27 | 122 | 5 | BE-7808 |
| 9   | 125 | 36 | 122 | 5 | BE-7809 |
| 10  | 125 | 36 | 122 | 5 | BE-7810 |
| 11  | 125 | 36 | 122 | 5 | BE-7811 |

**BAHCO**

| 12 | 125 | 36 | 122 | 5 | BE-7812 |
|----|-----|----|-----|---|---------|
| 13 | 125 | 36 | 161 | 5 | BE-7813 |
| 14 | 125 | 36 | 161 | 5 | BE-7814 |

## ERGO™ nut drivers, flexible blade

ergo®



### BE-76

| 6 | 150 | 27 | 122 | 5 | BE-7606 |
|---|-----|----|-----|---|---------|
| 7 | 150 | 27 | 122 | 5 | BE-7607 |
| 8 | 150 | 27 | 122 | 5 | BE-7608 |

## ERGO™ Screwdriver set, 5 pieces For TORX® head screws

ergo®



### BE-9885

| 5 |  | 1 | BE-9885 |
|---|--|---|---------|

BE-8910, BE-8930, BE-8915, BE-8920, BE-8925

## ERGO™ Screwdriver set, 6 pieces For slotted and Phillips head screws

ergo®



### BE-9881

| 6 |  | 1 | BE-9881 |
|---|--|---|---------|