

overheating then plug the appliance in again. If it still cannot be reset, contact Heatstore for advice.

CLEANING AND MAINTENANCE

- Before cleaning always remove the plug from the electrical socket.
- Clean the air inlet / outlet grilles frequently.
- The external surfaces of the heater may be cleaned with a moist cloth.
- Never use abrasive powders or solvents.
- Ensure the product is thoroughly dry before re-using.

SPECIFICATION

HS4212XNi 2000W; 240V; 50Hz



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

HEATSTORE

Telephone: **0117 923 5375** Fax: **0117 923 5374**
 Victoria Road, Avonmouth, Bristol BS11 9DB
www.heatstore.co.uk

ISSUE 2: 1108

HS4212XNi Fan Heater

Operating Instructions



IMPORTANT SAFEGUARDS

WHEN USING ANY ELECTRICAL APPLIANCE, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED.

PLEASE READ ALL INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE REFERENCE

IF IN ANY DOUBT ABOUT THE INSTALLATION OR USE OF THIS PRODUCT, CONSULT A COMPETENT ELECTRICIAN.

HEATSTORE

FOR YOUR OWN SAFETY

1. Do not use the appliance in rooms less than 4m² area.
2. Only connect the fan heater to a single-phase socket with a main voltage as specified on the rating plate.
3. Always use in an upright position.
4. Keep the air inlet and outlet free from objects: at least 1m in front and 500mm behind the heater. Keep combustible material such as furniture, cushions, bedding, paper, clothes, curtains etc. at least 1m away from the fan heater.
5. Do not hang anything on, or in front of the fan heater.
6. Always unplug the heater when not in use. Do not pull the cord to unplug the heater.
7. Do not install the heater below a socket.
8. The air outlet gets hot during operation. Do not touch the hot surface. Unplug the heater and allow to cool for 5 minutes before moving.
9. Do not cover.
10. Do not move the appliance while it is functioning in order to avoid overheating.
11. Do not use this fan heater in the immediate surroundings of a bath, shower or a swimming pool.
12. Do not use the fan heater in rooms with explosive gas or while using inflammable solvents, varnish or glue.
13. Do not use outdoors or leave unattended while in use.
14. Take care when using this appliance near children, the elderly or infirm.
15. If the power cord is damaged, the appliance malfunctions or is dropped or damaged, stop using the appliance and contact Heatstore for further instructions.
16. To avoid overheating, do not cover the cable and ensure it is fully unwound.
17. Keep the fan heater clean. Do not allow any objects to enter any ventilation or exhaust opening as this may cause electric shock, fire or damage to the heater.
18. Store in a cool dry place when not in use.

OPERATION OF THE HEATER

NOTE:- It is normal when the heater is turned on for the first time or when turned on after having not been used for a long period of time for a smell to be emitted. This will disappear when the heater has been on a short while.

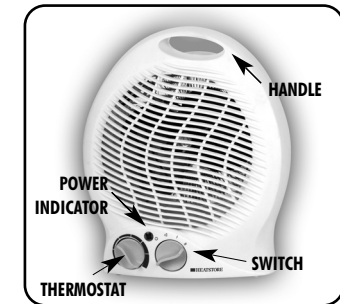


Figure 1

INSTALLATION

The appliance requires no installation. It should be used solely as a portable appliance. The use of extension leads is not recommended.

Portable appliances are not suitable for use in a bathroom.

OPERATION

Ensure the heater is on a flat, even surface.

Turn the thermostat knob in a clockwise direction until it reaches the maximum setting.

- Summer setting (ventilation only): turn the switch to setting
- Heating at mid power: turn the switch to setting **I** (1000W)
- Heating at full power: turn the switch to setting **II** (2000W)
- Switching off: turn the switch to setting

REGULATING THE THERMOSTAT

When the room has reached the required temperature turn the left thermostat knob slowly in an anti-clockwise direction up to the point where the appliance switches off and not beyond. The temperature fixed in this way will be automatically regulated and kept at a constant level by the thermostat.

NOTE:- The temperature control does not vary the fan speed.

AUTOMATIC SAFETY CUTOUT

The heater is fitted with a safety device which will switch off the heater in case of accidental overheating (e.g. obstruction of air intake and outlet grilles, motor turning slowly or not at all). To reset, disconnect the plug from the power for approximately 10 minutes, remove the cause of