

- Heating at mid power: turn the switch to setting • (1000W)
- Heating at full power: turn the switch to setting •• (2000W)
- Switching off: turn the switch to setting ○

REGULATING THE THERMOSTAT

When the room has reached the required temperature turn the left thermostat knob slowly in an anti-clockwise direction up to the point where the appliance switches off and not beyond. The temperature fixed in this way will be automatically regulated and kept at a constant level by the thermostat.

NOTE:- The temperature control does not vary the fan speed.

AUTOMATIC SAFETY CUTOUT

The heater is fitted with a safety device which will switch off the heater in case of accidental overheating (e.g. obstruction of air intake and outlet grilles, motor turning slowly or not at all). To reset, disconnect the plug from the power for approximately 10 minutes, remove the cause of overheating then plug the appliance in again. If it still cannot be reset, contact Heatstore for advice.

Cleaning and maintenance

- Before cleaning always remove the plug from the electrical socket.
- Clean the air inlet / outlet grilles frequently.
- The external surfaces of the heater may be cleaned with a moist cloth.
- Never use abrasive powders or solvents.
- Ensure the product is thoroughly dry before re-using.

SPECIFICATION

HS4213 1700-2000W; 220-240V, 50Hz



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.



Telephone: **0117 923 5375** Fax: **0117 923 5374**
Victoria Road, Avonmouth, Bristol BS11 9DB
www.heatstore.co.uk

HS4213 Fan Heater Operating Instructions



IMPORTANT SAFEGUARDS

WHEN USING ANY ELECTRICAL APPLIANCE, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED.

PLEASE READ ALL INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE REFERENCE

IF IN ANY DOUBT ABOUT THE INSTALLATION OR USE OF THIS PRODUCT, CONSULT A COMPETENT ELECTRICIAN.



Safety Instructions

- ALWAYS ensure that the heater is placed on a firm level surface. Ensure that the heater is not positioned close to curtains or furniture as this could create a fire hazard.
- MAKE SURE the power supply to the socket into which the heater is plugged is in accordance with the rating label on the heater and that the socket is earthed.
- KEEP the power cord away from the hot body of the heater.
- DO NOT use the heater if the power cord is damaged, it must be replaced by a suitably qualified person.
- DO NOT position the heater in front of, or immediately below a wall socket.
- ALWAYS unplug the heater when moving it from one location to another.
- The heater is for indoor use only.
- The heater is not intended for use in bathrooms, laundry areas or similar indoor locations. Never place the heater where it may fall into a bath or other water container.
- DO NOT use the heater in areas where flammable liquids are stored or where flammable fumes may be present.
- DO NOT place the heater on carpets having a very deep pile.
- DO NOT insert any object through the heat outlet or air grilles of the heater.
- WARNING: In order to avoid overheating, do not cover the heater.
- Children of less than 3 years old should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has

been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

- **CAUTION:** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

Operation of the heater

NOTE:- It is normal when the heater is turned on for the first time or when turned on after having not been used for a long period of time for a smell to be emitted. This will disappear when the heater has been on a short while.

INSTALLATION

The appliance requires no installation. It should be used solely as a portable appliance. The use of extension leads is not recommended.

Portable appliances are not suitable for use in a bathroom.

OPERATION

Ensure the heater is on a flat, even surface.

Turn the thermostat knob in a clockwise direction until it reaches the maximum setting.

- Summer setting (ventilation only): turn the switch to setting 

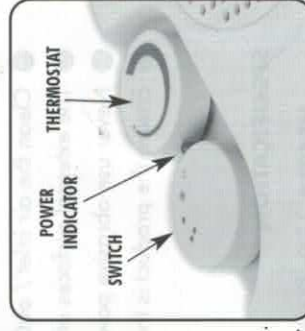


Figure 1