

5 Port Air Operated Valve

Series SYA3000/5000/7000

How to Order

A, B port size

Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SYA3000
01	1/8	SYA5000
02	1/4	SYA7000

One-touch fitting (Metric size)

Symbol	Port size	Applicable series
C4	One-touch fitting for ø4	SYA3000
C6	One-touch fitting for ø6	SYA5000
C8	One-touch fitting for ø8	SYA7000
C10	One-touch fitting for ø10	

One-touch fitting (Inch size)

Symbol	Port size	Applicable series
N3	One-touch fitting for ø5/32"	SYA3000
N7	One-touch fitting for ø1/4"	SYA5000
N9	One-touch fitting for ø5/16"	SYA7000
N11	One-touch fitting for ø3/8"	

Series

Symbol	Series
3	SYA3000
5	SYA5000
7	SYA7000

Thread type

Symbol	Thread type
Nil	Rc
F	G
N	NPT
T	NPTF

* Except for M5

Bracket

Symbol	Bracket
Nil	Without bracket
F1	With foot bracket (2 position single only)
F2	With side bracket

Body ported SYA 5 1 20 - C6 -

Base mounted SYA 5 1 40 -

Series

Symbol	Series
3	SYA3000
5	SYA5000
7	SYA7000

Type of actuation

Symbol	Type of actuation
1	2 position single (A)4 2(B) (EA)5 1 3(EB) (P)
2	2 position double (A)4 2(B) (EA)5 1 3(EB) (P)
3	3 position closed center (A)4 2(B) (EA)5 1 3(EB) (P)
4	3 position exhaust center (A)4 2(B) (EA)5 1 3(EB) (P)
5	3 position pressure center (A)4 2(B) (EA)5 1 3(EB) (P)

P, R port thread type

Symbol	Thread type
Nil	Rc
F	G
N	NPT
T	NPTF

Port size

Symbol	Port size	Applicable series
Nil	Without sub-plate	
01	1/8 With sub-plate	SYA3000
02	1/4 With sub-plate	SYA5000
02	1/4 With sub-plate	SYA7000
03	3/8 With sub-plate	


Specifications

Fluid		Air
Operating pressure range MPa	2 position single	0.15 to 0.7
	2 position double	-100 kPa to 0.7
	3 position	-100 kPa to 0.7
Pilot pressure range ^{Note 1)} MPa	2 position single	(0.7 x P + 0.1) to 0.7 P: Operating pressure range
	2 position double	0.1 to 0.7
	3 position	0.2 to 0.7
Ambient and fluid temperature (°C)		-10 to 60 (No freezing.)
Manual override (Manual operation)		Non-locking push type
Lubrication		Not required
Mounting orientation		Unrestricted
Impact/Vibration resistance (m/s ²) ^{Note 2)}		150/30

Note 1) In case of single type, be certain that pressure within operating pressure range be supplied to supply port, because return pressure is introduced from supply port {1(P)} for activation.

Note 2) Impact resistance: No malfunction resulted from the impact test using a drop impact tester. The test was performed on the axis and right angle directions of the main valve and armature, when pilot signal is ON and OFF. (Value in the initial state)

Vibration resistance: No malfunction occurred in one sweep test between 45 and 2000 Hz. Test was performed to axis and right angle directions of the main valve and armature when pilot signal is ON and OFF. (Value in the initial state)

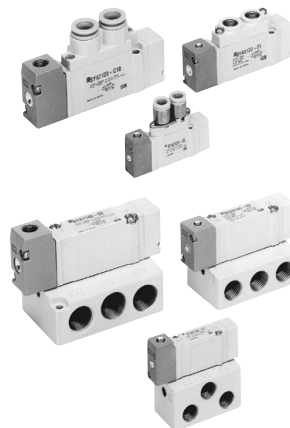

⚠ Caution

Be sure to read before handling. Refer to front matter 53 for Safety Instructions and pages 3 to 8 for 3/4/5 Port Solenoid Valve Precautions.

How to Order Manifold Base

Same manifolds as series SY (Non plug-in style) are prepared.
(For 20, 41, 42 and 45 Types)

SS5YA³₅₋₇ Fill the same as **SS5Y³₅₋₇**.
(Refer to pages 324, 376 and 422.)

* Specify the part numbers for valves and options together beneath the manifold base part number.

<Example>


- SS5YA5-42-03-02** 1 set (Type 42, 3 station manifold base part no.)
 * SYA5140 1 set (Single air operated valve part no.)
 * SYA5240 1 set (Double air operated valve part no.)
 * SY5000-26-20A 1 set (Blanking plate assembly part no.)

⊣ The asterisk denotes the symbol for assembly.

Prefix it to the part nos. of the solenoid valve, etc.

Note) When single body ported air operated valves are ordered, manifold mounting screws and gaskets are not included. Order them separately if necessary.
(For details, refer to pages 353 and 416.)

Pilot Pressure Range (Single pilot)

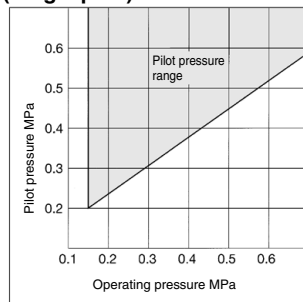

SYA

SYJA

VZA

VFA

VFRA

VPA4

VSA4

SYJA

VZA

VTA

VGA

VPA

VPA3