

Replacement Parts: Adapter/Buffer (Series ZPT)


Appropriate adaptor or buffer can be selected for the currently used pad model.

● Without buffer

— The same symbol


←···· Replacement of the symbol

[Pad model no.]

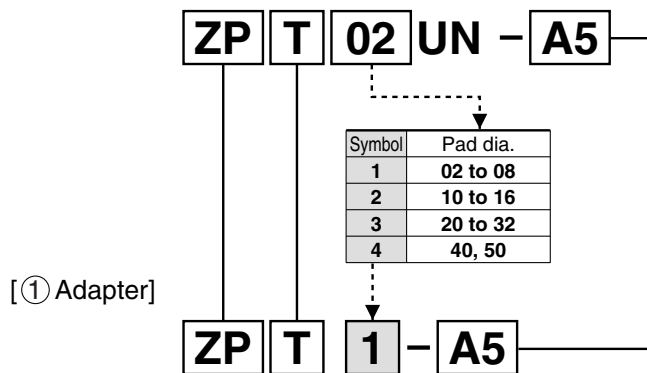

[① Adapter]

Construction

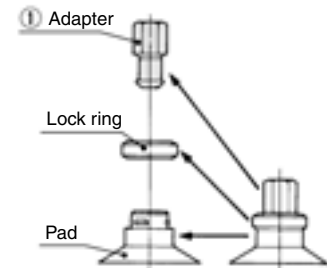

Applicable pad diameter: $\phi 2$ to $\phi 8$

2 x 4, 3.5 x 7, 4 x 10

$\phi 10$ to $\phi 16$ (Thin section series)

Model	① Adapter
ZPT□□□□-A5	ZPT1-A5
ZPT□□□□-A6	ZPT1-A6
ZPT□□□□-B4	ZPT1-B4
ZPT□□□□-B5	ZPT1-B5

Applicable pad diameter: $\phi 10$ to $\phi 16$

Model	① Adapter
ZPT□□□□-A5	ZPT2-A5
ZPT□□□□-A6	ZPT2-A6
ZPT□□□□-B5	ZPT2-B5
ZPT□□□□-B6	ZPT2-B6
ZPT□□□□-B01	ZPT2-B01
ZPT□□□□-N01	ZPT2-N01
ZPT□□□□-T01	ZPT2-T01

Applicable pad diameter: $\phi 20$ to $\phi 32$

Model	① Adapter
ZPT□□□□-A6	ZPT3-A6
ZPT□□□□-A8	ZPT3-A8
ZPT□□□□-B5	ZPT3-B5
ZPT□□□□-B6	ZPT3-B6
ZPT□□□□-B8	ZPT3-B8
ZPT□□□□-B01	ZPT3-B01
ZPT□□□□-N01	ZPT3-N01
ZPT□□□□-T01	ZPT3-T01

Applicable pad diameter: $\phi 40$, $\phi 50$

Model	① Adapter
ZPT□□□□-A6	ZPT4-A6
ZPT□□□□-A8	ZPT4-A8
ZPT□□□□-B6	ZPT4-B6
ZPT□□□□-B8	ZPT4-B8
ZPT□□□□-B01	ZPT4-B01
ZPT□□□□-N01	ZPT4-N01
ZPT□□□□-T01	ZPT4-T01