

How to Order Manifold Assembly

3 position valve.

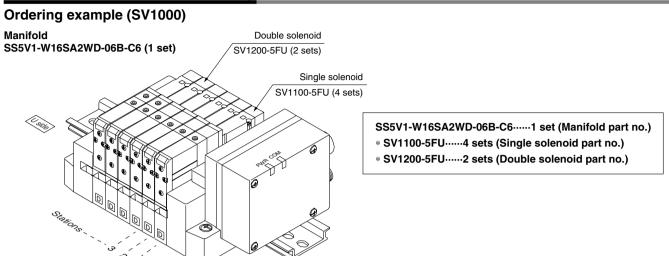

How to Order Valve

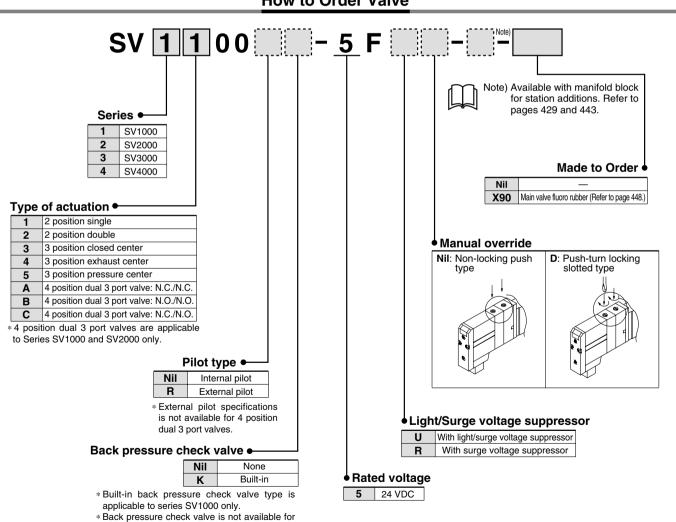



Refer to Specific Product Precautions 2

on page 450.

SJ

SYJ

SZ

VP4

S0700

VQ

VQ4

VQ5

VQC

VQZ

SQ

VFS

VFR

VQ7