


## FUNCTIONING OF SOLENOID VALVES SERIES 3 PLUG-IN

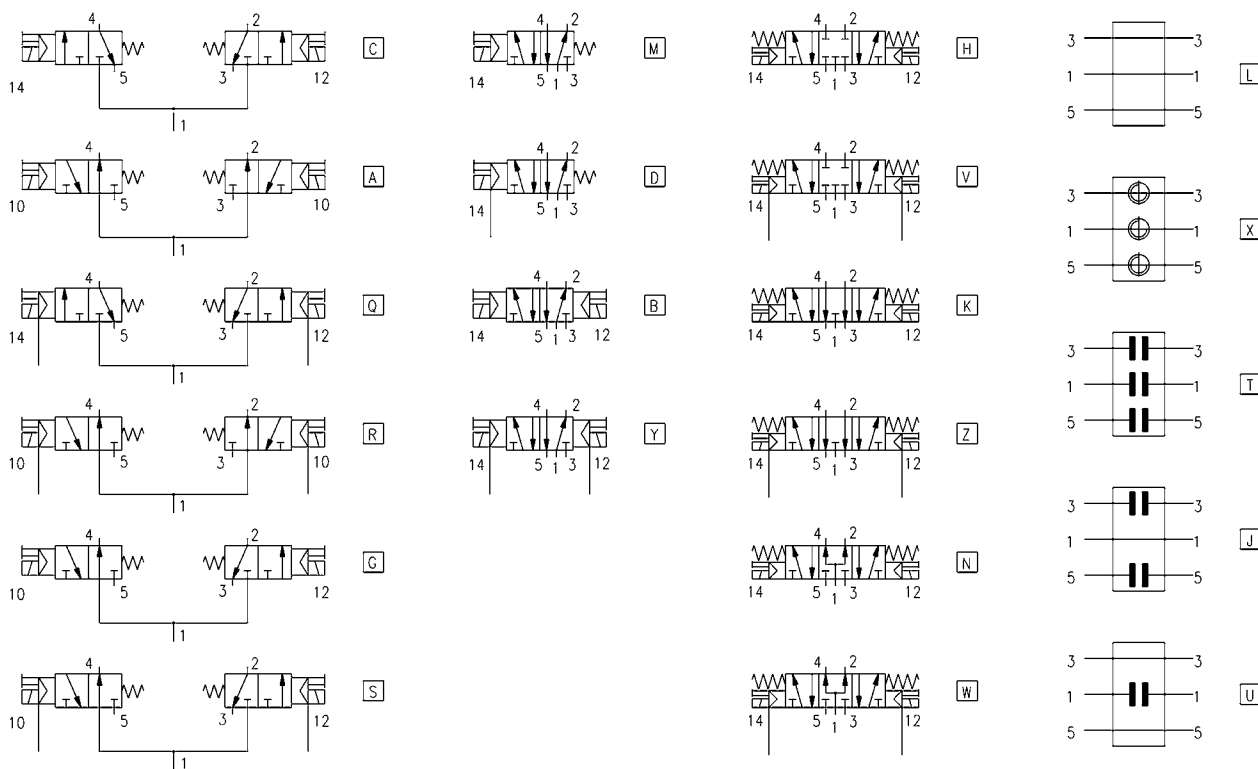

| Mod.            | Function                                       | Actuation         | Pilot supply | Working pressure (bar) | Pilot pressure (bar) | Code |
|-----------------|------------------------------------------------|-------------------|--------------|------------------------|----------------------|------|
| 338D-015-02     | 2 x 3/2 N.C.                                   | solenoid/spring   | Internal     | 2,5 ÷ 10               | -                    | C    |
| 348D-015-02     | 2 x 3/2 N.O.                                   | solenoid/spring   | Internal     | 2,5 ÷ 10               | -                    | A    |
| 398D-015-02     | 1 3/2 N.C. + 1 3/2 N.O.                        | solenoid/spring   | Internal     | 2,5 ÷ 10               | -                    | G    |
| 358-015-02      | 5/2 monostable                                 | solenoid/spring   | Internal     | 2,5 ÷ 10               | -                    | M    |
| 358-011-02      | 5/2 bistable                                   | solenoid/solenoid | Internal     | 1,5 ÷ 10               | -                    | B    |
| 368-011-02      | 5/3 C.C.                                       | solenoid/solenoid | Internal     | 2 ÷ 10                 | -                    | H    |
| 378-011-02      | 5/3 C.O.                                       | solenoid/solenoid | Internal     | 2 ÷ 10                 | -                    | K    |
| 388-011-02      | 5/3 C.P.                                       | solenoid/solenoid | Internal     | 2 ÷ 10                 | -                    | N    |
| 338D-E15-02     | 2 x 3/2 N.C.                                   | solenoid/spring   | External     | -0,9 ÷ 10              | 2,5 ÷ 10             | Q    |
| 348D-E15-02     | 2 x 3/2 N.O.                                   | solenoid/spring   | External     | -0,9 ÷ 10              | 2,5 ÷ 10             | R    |
| 398D-E15-02     | 1 3/2 N.C. + 1 3/2 N.O.                        | solenoid/spring   | External     | -0,9 ÷ 10              | 2,5 ÷ 10             | S    |
| 358-E15-02      | 5/2 monostable                                 | solenoid/spring   | External     | -0,9 ÷ 10              | 2,5 ÷ 10             | D    |
| 358-E11-02      | 5/2 bistable                                   | solenoid/solenoid | External     | -0,9 ÷ 10              | 1,5 ÷ 10             | Y    |
| 368-E11-02      | 5/3 C.C.                                       | solenoid/solenoid | External     | -0,9 ÷ 10              | 2 ÷ 10               | V    |
| 378-E11-02      | 5/3 C.O.                                       | solenoid/solenoid | External     | -0,9 ÷ 10              | 2 ÷ 10               | Z    |
| 388-E11-02      | 5/3 C.P.                                       | solenoid/solenoid | External     | -0,9 ÷ 10              | 2 ÷ 10               | W    |
| CNVL/1L         | free position (electrical and pneumatic cover) | -                 | -            | -                      | -                    | L    |
| CNVL-3P1        | plate for supply and outlets                   | -                 | -            | -                      | -                    | X    |
| CNVL-3H-TP (x1) | diaphragm for supply (1)                       | -                 | -            | -                      | -                    | U    |
| CNVL-3H-TP (x2) | diaphragm for outlets (3-5)                    | -                 | -            | -                      | -                    | J    |
| CNVL-3H-TP (x3) | diaphragm for supply (1) and outlets (3-5)     | -                 | -            | -                      | -                    | T    |