



Manifold Option

■ Type 20, 23 Blanking plate assembly

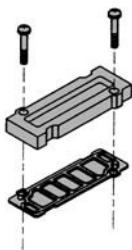


Series	Assembly part No.
10-SY3000	SY3000-26-9A
10-SY5000	SY5000-26-20A
10-SY7000	SY7000-26-22A
10-SY9000	SY9000-26-1A

■ Type 20P, 23P Blanking plate assembly

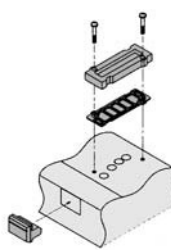

Series	Assembly part No.
10-SY3000	SY3000-26-10A
10-SY5000	SY5000-26-21A
10-SY7000	SY7000-26-23A
10-SY9000	SY9000-26-3A


■ Gasket assembly part No.

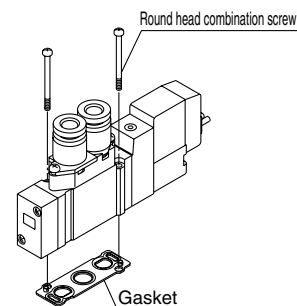

Series	Gasket assembly
10-SY3000	SY3000-GS-1
10-SY5000	SY5000-GS-1
10-SY7000	SY7000-GS-1
10-SY9000	SY9000-GS-1

Note) Gasket assembly consists of mounting screws and a gasket.


■ Individual SUP spacer assembly

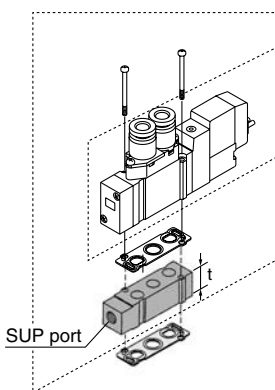

Series	Assembly part No.	Port size	t
10-SY3000	SY3000-38-20A	M5 x 0.8	10.5
10-SY5000	SY5000-38-1 * A	1/8	15
10-SY7000	SY7000-38-1 * A	1/4	18
10-SY9000	SY9000-38-1 * A	1/4	20

Note) · The SUP port of 10-SY3000/5000/7000 may be either on the lead wire side or end plate side. (An assembly is shipped under the conditions shown in the figure.)
· The end plate side is only available to 10-SY9000.


■ Individual EXH spacer assembly

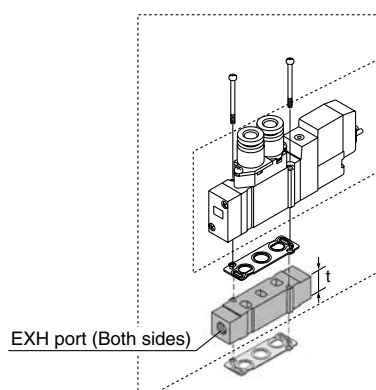

Series	Assembly part No.	Port size	t
10-SY3000	SY3000-39-20A	M5 x 0.8	10.5
10-SY5000	SY5000-39-1 * A	1/8	15
10-SY7000	SY7000-39-1 * A	1/4	18
10-SY9000	SY9000-39-1 * A	1/4	20

Note) In case of types 20P and 23P, for protection of the wiring unit section from drainage, piping at the EA port should be arranged so that it will not be directly exposed to exhaust from the valve.

■ Individual SUP spacer assembly + Individual EXH spacer assembly (stacked)

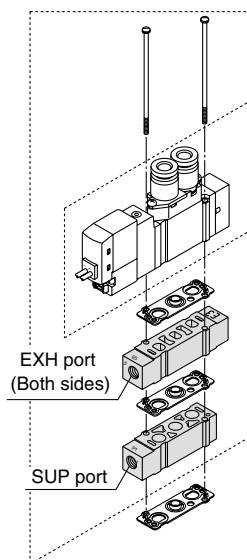

⚠ Caution

Mounting screw tightening torque

M2: 0.16N·m
M3: 0.8N·m
M4: 1.4N·m

* : Thread type

Nil	Rc
F	G
N	NPT
T	NPTF

⚠ Warning

When mounting a valve or spacer on the manifold base or sub-plate, etc., those mounting directions are determined. If mounted in the wrong direction, the equipment to be connected may cause malfunction. Refer to external dimensions, and then mount it.

[○: Applicable ×: Not applicable]

Series	Individual SUP + individual EXH assembly part No.	Port size	Applicable manifold type	
			20	20P
10-SY3000	SY3000-120-1A	M5 x 0.8	○	×
10-SY5000	SY5000-75-2 * A	1/8	○	×
10-SY7000	SY7000-73-3 * A	1/4	○	×



Note) The SUP port of SUP spacer can be mounted in either direction. For the EXH port, connect the side marked with "5" to the pilot valve side. Be sure to connect each port of the pilot valve to protect from drainage.

An individual SUP spacer and an individual EXH spacer can be mounted on either top or bottom. (An assembly is shipped under the condition shown in the figure above.)