

Bore Gage Zero Checker

SERIES 515

The Bore Gage Zero Checker allows easy zero adjustment of dial bore gages with ranges of 18mm (.7") through 400mm (16") using gage blocks.

SPECIFICATIONS

Order No.	Applicable range
515-590	18 -400mm (.7" - 16")




Setting Rings

SERIES 177 — Accessories for Inside Micrometers, Holtest and Dial Bore Gages


FEATURES

- Used for quick and accurate setting of dial bore gages, Holtest and inside micrometers.
- If a setting ring of an optimal size is prepared, it can be used for calibration.

 How to read the indicated value Series 526



The 526 series has a gage head with high curvature. Alignment with the diameter (a-a') is achieved by rotating the gage head in the direction indicated by the arrow, and the reading is the maximum value read from the dial indicator.

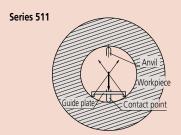

The 511 series provides a guide plate to align the setting ring diameter with the measurement axis of the bore gage.



Ceramic Setting Rings



177-424



177-429



DIMENSIONS

