



Proper Combinations of Solenoid Valve, Gaskets and Manifold/Subplate Base

Body Ported Type
(NVJ 302
NVJ 302M, 302R)

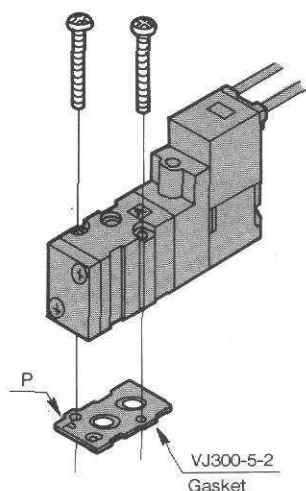

Applicable base
NVV3J3-20
NVV3J3-20R


Base Mounted Type
(NVJ 304
NVJ 304M, 304R)

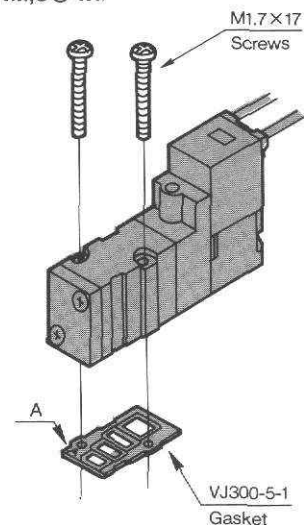

Applicable base
Subplate (VJ300-9-1)
NVV3J3-41
NVV3J3-S41
NVV3J3-42
NVV3J3-S42
NVV3J3-42R
NVV3J3-S42R


Proper Combination of Blank Plate Ass'y & Manifold Base

Blank Plate Ass'y
VJ300-10-2A

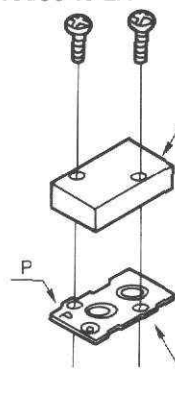

Applicable base
NVV3J3-20
NVV3J3-20R

Blank Plate Ass'y
VJ300-10-1A

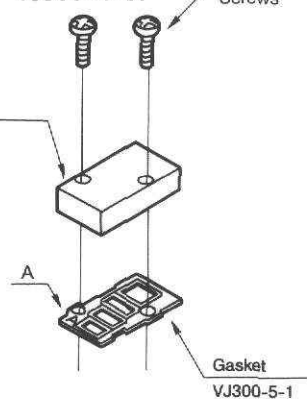

Applicable base
Subplate (VJ300-9-1)
NVV3J3-41
NVV3J3-S41
NVV3J3-42
NVV3J3-S42
NVV3J3-42R
NVV3J3-S42R

Difference Between Internal Pilot Type and External Pilot Type

