


ARG20(K)/30(K)/40(K)

The
Replacement
Procedure is on
p. 509

Construction

ARG20/30/40

ARG20K/30K/40K

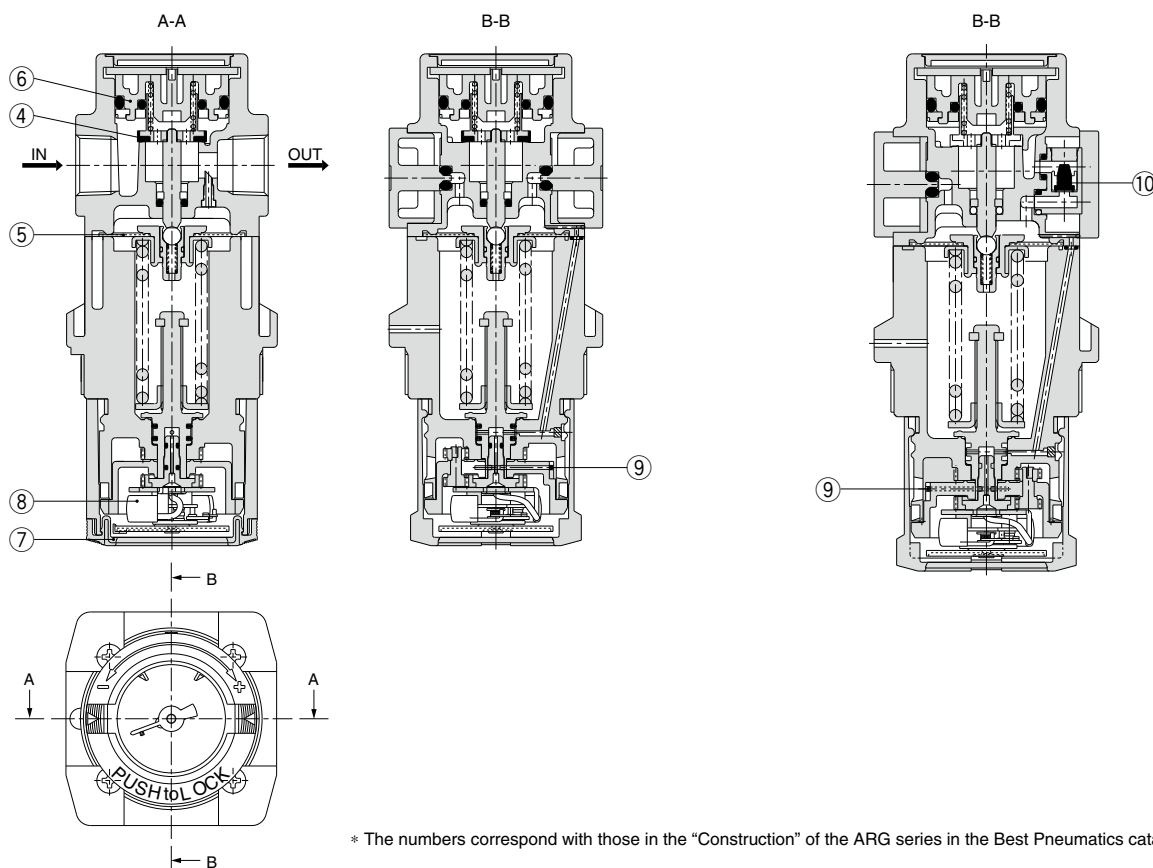

* The numbers correspond with those in the "Construction" of the ARG series in the Best Pneumatics catalog.

Replacement Parts

No.	Description	Material	Qty.	Part no.			Note
				ARG20(K)	ARG30(K)	ARG40(K)	
4	Valve	Brass, HNBR	1	AR20P-410S	AR30P-410S	AR40P-410S	
5	Diaphragm assembly	Weather resistant NBR	1	AR20P-150AS	AR30P-150AS	AR40P-150AS	
6	Valve guide assembly	POM, NBR	1	AR20P-050AS	AR30P-050AS	AR40P-050AS	
7	Pressure gauge cover	PC	1	ARG20P-400S	ARG30P-400S	ARG40P-400S	
8	Pressure gauge ^{Note 1)}	—	1	GB2-10AS	GB3-10AS	GB4-10AS	
9	Clip	Stainless steel	1	ARG20P-420S	ARG30P-420S	ARG40P-420S	
10	Check valve assembly ^{Note 2)}	—	1	AR20KP-020AS			ARG20K, 30K, 40K

Note 1) Only the standard part numbers are listed for the pressure gauges.

Note 2) Check valve assembly contains check valve, check valve cover and its screws (2 pcs).

Options/Part No.

Applicable model				ARG20(K)	ARG30(K)	ARG40(K)
Option						
Bracket assembly ^{Note 1)}				ARG20P-270AS	ARG30P-270AS	ARG40P-270AS
Set nut				ARG20P-260S	ARG30P-260S	ARG40P-260S
Pressure gauge	Pressure gauge display range	Standard	0 to 1.0 MPa	GB2-10AS	GB3-10AS	GB4-10AS
			0 to 0.3 MPa	GB2-3AS	GB3-3AS	GB4-3AS
		Optional	0 to 150 psi	GB2-P10AS	GB3-P10AS	GB4-P10AS
			0 to 45 psi	GB2-P3AS	GB3-P3AS	GB4-P3AS

Note 1) Assembly includes a bracket and set nuts.