

Check Valve with One-touch Fitting Series AKH/AKB

How to Order

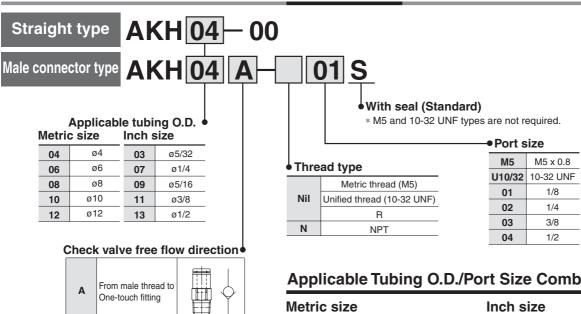

Applicable Tubing O.D./Port Size Combinations

Metric size							Inch size						
Model	Applicable tubing O.D.	R thread					Model	Applicable tubing	NPT thread				
Model		M5	1/8	1/4	3/8	1/2	Model	O.D.	10-32 UNF	1/8	1/4	3/8	1/2
AKH04□	ø4	•	•				AKH03□	ø5/32	•	•			
AKH06□	ø6	•	•	•			AKH07□	ø1/4	•	•	•		
AKH08□	ø8		•	•	•		AKH09□	ø5/16		•	•	•	
AKH10□	ø10			•	•	•	AKH11□	ø3/8			•	•	•
AKH12□	ø12				•	•	AKH13□	ø1/2				•	•

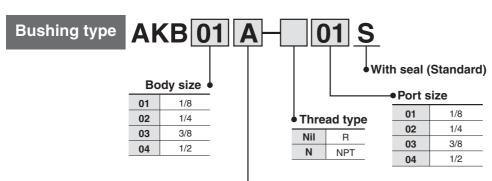

Check valve free flow direction

From One-touch fitting to male thread

A	From male to female thread	
В	From female to male thread	

Female/Male Threads Combinations

R threa	ad	NPT thread										
Model	Female thread	Ма	le th	rea	d R	Model	Female thread NPT	Male thread NPT				
Model	Rc	1/8	1/4	3/8	1/2			1/8	1/4	3/8	1/2	
AKB01□	1/8	•				AKB01□	1/8	•				
AKB02□	1/4		•			AKB02□	1/4		•			
AKB03□	3/8			•		AKB03□	3/8			•		
AKB04□	1/2					AKB04□	1/2				•	

Check Valve with One-touch Fitting Series AKH/AKB



Specifications

Fluid	Air					
Proof pressure	1.5 MPa					
Operating pressure range	-100 kPa to 1 MPa					
Cracking pressure	0.005 MPa					
Ambient temperature and operating fluid temperature	−5 to 60°C (No freezing)					
Applicable tubing material Note)	Nylon, Soft nylon, Polyurethane					


Note) Use caution regarding the max. operating pressure when soft nylon or polyurethane tubing is used.


(Refer to pages 15-6-3 to 15-6-5 for details.)

Application Example for Check Valve with One-touch Fitting


Prevention of reverse flow to vacuum source * (Simple vacuum holding)

Tank pressure reverse flow prevention

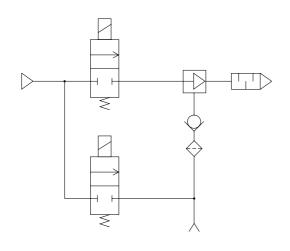

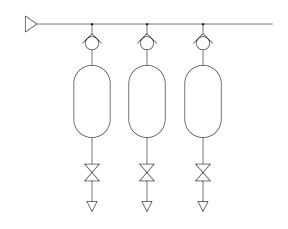

Drop prevention *

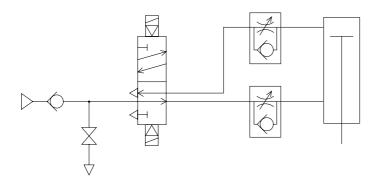

* A certain amount of leakage is allowed in the specifications of this product. Please note that it is not suitable for holding over an extended period of time.

⚠ Caution

Be sure to read before handling. Refer to pages 15-18-3 to 15-18-4 for Safety Instructions and Common Precautions on the products mentioned in this catalog, and refer to pages 15-8-6 to 15-8-8 for Precautions on every series.

SMC

AS

ASP

ASN AQ

ASV

AK ASS

ASR

ASF