



BSPP Diagnostic Pressure Gauge Adapters

Parker's BSPP direct-connect pressure gauge adapters are available in the most common tube/hose connections — ORFS, 37° Flare (JIC) and 24° Metric Flareless (DIN 2353). European pressure gauges often utilize BSPP threads on the pressure gauges (manometers). Sealing is achieved at the bottom of the port with a sealing washer as shown in the illustration on the right.

BSPP Pressure Gauge Adapters

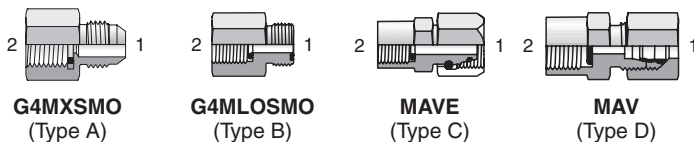

Part Number	Type	End Size	
		1 (in.)	2 BSPP
4-4G4MXSMOSCF	A	1/4	1/4-19
6G4MXSMOSCF	A	3/8	1/4-19
8-4G4MXSMOSCF	A	1/2	1/4-19
4-4G4MLOSMOSCF	B	1/4	1/4-19
6G4MLOSMOSCF	B	3/8	1/4-19
8-4G4MLOSMOSCF	B	1/2	1/4-19
		1 (mm)	2 BSPP
MAVE06LRFCF	C	6	1/4-19
MAVE08LRFCF	C	8	1/4-19
MAVE10LRFCF	C	10	1/4-19
MAVE06SRCF	C	6	1/2-14
MAVE08SRCF	C	8	1/2-14
MAVE10SRCF	C	10	1/2-14
MAVE12SRCF	C	12	1/2-14
MAVE06SR1/4CF	C	6	1/4-19
MAVE08SR1/4CF	C	8	1/4-19
MAVE10SR1/4CF	C	10	1/4-19
MAVE12SR1/4CF	C	12	1/4-19
MAV04LLRCF	D	4	1/4-19
MAV06LRFCF	D	6	1/4-19
MAV08LRFCF	D	8	1/4-19
MAV10LRFCF	D	10	1/4-19
MAV12LRFCF	D	12	1/4-19
MAV06SRCF	D	6	1/2-14
MAV08SRCF	D	8	1/2-14
MAV10SRCF	D	10	1/2-14
MAV12SRCF	D	12	1/2-14

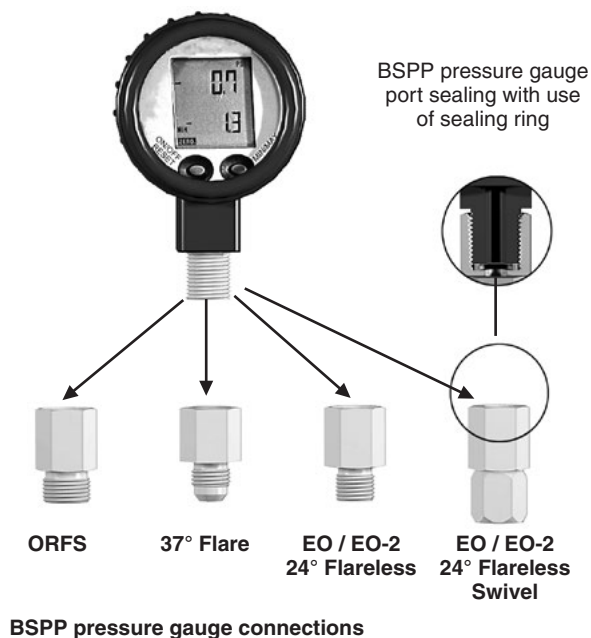

Note: MAV supplied as standard with PSR +M nut (EO assembled)

* BSPP Pressure Gauge Connection requires seal. 1/4" replacement seal P/N: M25180.

** BSPP Pressure Gauge Connection requires seal. 1/4" replacement seal P/N: DK11/4CFX, 1/2" replacement seal P/N: DK11/2CFX.

Part numbers shown are for steel. Other material options available. Go to www.parker.com for details.
Dimensions and pressures are for reference only and are subject to change.