

How to Order

VH 2 0 1 — 02 —

Hand valve •

Body size (Base size) •

2	1/4 base
3	3/8 base
4	1/2 base
6	1 base

Piping/Mounting •

Symbol	Piping (Note)	Mounting method
0	Side	Body
1	Side	Panel mounting
2	Bottom	Body
3	Bottom	Panel mounting

Note) Only side piping is available for VH200 and VH600 and R port is located on the bottom.

1(P) port location

R	1(P) port 180° location change
L	Long handle (Applicable to VH300/400)

* When specifying more than one option, indicate symbols alphabetically.

Port size (Nominal size)

02	1/4
03	3/8
04	1/2
06	3/4
10	1

Thread type

Nil	Rc
N	NPT
F	G


Function •

0	3 position closed center
1	3 position exhaust center
2	2 position

Flow Characteristics


VH200

 Effective area S = 7.5 mm²

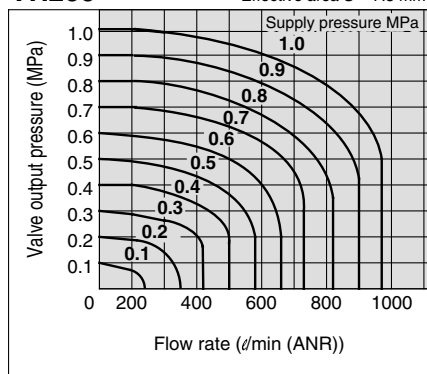


VH300

 Effective area S = 20 mm²

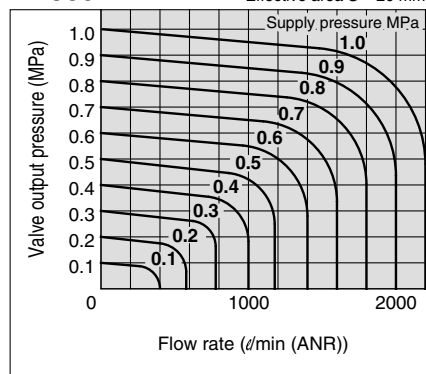

VH400

 Effective area S = 55 mm²

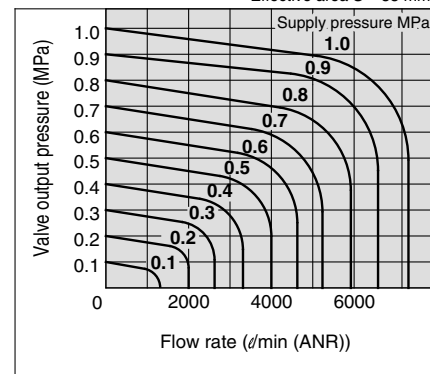

VH600

Effective area S = 194 mm²

