

MY1B Series

Accessory Brackets (Option)

Stroke Adjustment Units

MY-A 20 H2-6N

Stroke adjustment unit

Bore size

10	10 mm
16	16 mm
20	20 mm
25	25 mm
32	32 mm
40	40 mm

* Stroke adjustment unit is not available for ø50, ø63, ø80, and ø100.

Intermediate fixing spacer

Nil	Without spacer
6	Short spacer
7	Long spacer

Spacer delivery type

Nil	Unit installed
N	Spacer only

* Spacers are used to fix the stroke adjustment unit at an intermediate stroke position.
 * Spacers are shipped for a set of two.
 * Intermediate fixing spacer is not available for ø10.

Unit no.

Symbol	Stroke adjustment unit	Mounting position
A1	A unit	Left
A2		Right
L1	L unit	Left
L2		Right
H1	H unit	Left
H2		Right

* A and H unit only for ø10, A unit only for ø16

Stroke adjustment range

Bore size	10		16		20			25			32			40		
Unit symbol	A	H	A	L	A	L	H	A	L	H	A	L	H	A	L	H
Without spacer	0 to -5		0 to -5.6		0 to -6			0 to -11.5			0 to -12			0 to -16		
With short spacer	—	—	-5.6 to -11.2		-6 to -12			-11.5 to -23			-12 to -24			-16 to -32		
With long spacer	—	—	-11.2 to -16.8		-12 to -18			-23 to -34.5			-24 to -36			-32 to -48		

Spacer length

Bore size	16	20	25	32	40
Short spacer	5.6	6	11.5	12	16
Long spacer	11.2	12	23	24	32

Component Parts

<p>MY-A20H2 (Without spacer)</p>	<p>MY-A20H2-6 (With short spacer)</p> <p>Short spacer</p>	<p>MY-A20H2-7 (With long spacer)</p> <p>Long spacer</p>	<p>MY-A20H2-6N (Short spacer only)</p> <p>Short spacer</p> <hr/> <p>MY-A20H2-7N (Long spacer only)</p> <p>Long spacer</p>
---	--	--	---