
Type 50 Side Ported Type 51 **Bottom Ported** 

# Plug-in Metal Base

D-sub Connector | Flat Ribbon Cable | PC Wiring |

# Series SY3000/5000 ( )


**How to Order Manifold** 

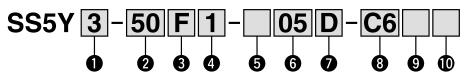


#### Series SY3000 SY5000

#### 2 Type Side ported 51 Bottom ported 50R Side ported, External pilot

\* External pilot is not available for the bottom ported type.

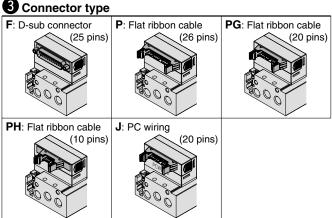

### **How to Order Manifold Assembly**

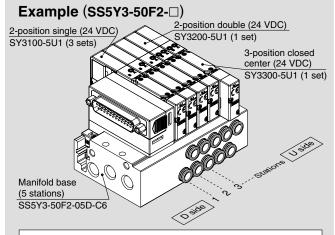


SS5Y3-50F2-05D-C6 ··· 1 set (Type 50 5-station manifold base part no.) \*SY3100-5U1----- 3 sets (2-position single part no.) \*SY3200-5U1------ 1 set (2-position double part no.) \*SY3300-5U1...... 1 set (3-position closed center part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the valve, etc.

- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Note) When mixing top ported configurations, select from page 30. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side

#### 4 Connector entry direction

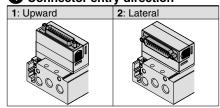

**5** Wiring type

<u> </u>					
Nil	All double wiring Note 1)				
S	All single wiring Note 2)				
	7 til Siligic Willing				

- Note 1) All double wiring: 2-position single, double, 3-position and 4position valves can be used on all manifold stations.
- Note 2) All single wiring: Available only for the manifold which has 2position single for all stations.
- Note that 2-position double, 3- or 4-position valves cannot be used. Note 3) Please contact SMC if a mixture of single wiring and double wiring is required.

#### 6 Valve stations

<b>F</b> : D-s	F: D-sub connector (25 pins)			<b>P</b> : Flat ribbon cable (26 pins)			<b>PG</b> : Flat ribbon cable (20 pins)		
Symbol	Stations	Note	Symbol	Stations	Note	Symbol	Stations	Note	
02	2 stations	All	02	2 stations	All	02	2 stations	All	
:	:	double	•	:	double	:	:	double	
12	12 stations	wiring	12	12 stations	wiring	09	9 stations	wiring	
02	2 stations	All	02	2 stations	All	02	2 stations	All	
:	:	single	:	:	single	:	:	single	
12	12 stations	wiring	12	12 stations	wiring	12	12 stations	wiring	

J: PC wiring (20 pins) **PH**: Flat ribbon cable (10 pins) Symbol Stations Note Symbol Stations Note 02 ΑII **02** 2 stations double double wiring wiring 4 stations 80 8 stations **02** 2 stations 02 2 stations ΑII ΑII single single 12 12 stations 08 wiring wiring 8 stations

\* This also includes the number of blanking plate assembly.

## P. E port entry

U	U side Note 1)
D	D side Note 1) Note 2)
В	Both sides

Note 1) Plugs are mounted on the opposite side of the selected ports.

Note 2) Only D side is available for Type 51 (Bottom ported).

#### Refer to the page on the right for 8.

#### 9 Thread type Nil Rc G Ν NPT **NPTF**

#### Mounting

• mounting							
Nil	Direct mounting						
D	DIN rail mounting (With DIN rail)						
D0	DIN rail mounting (Without DIN rail)						
D3	For 3 stations	0					
:		Specify a longer rail than the standard length.					
D12	For 12 stations						

Only direct mounting is available for Type 51 (Bottom ported).