

Series MXQ

External Dimensions of Adjuster

Rubber Stopper (AS/AT)

Extension End

Body mounting section


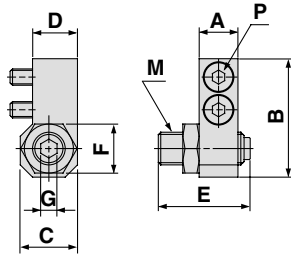



Table mounting section

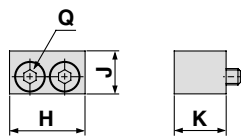

Applicable size	Model	Stroke adjustment range (mm)	Body mounting section										Table mounting section			
			A	B	C	D	E	F	G	M	P ^{*1)}	H	J	K	Q ^{*1)}	
MXQ 6 (L)	MXQ-AS 6 (L)	5	6	19	8	7	16.5	7	2.5	M5 x 0.8	M2.5 x 6	12.5	6	8.3	M2.5 x 8	
	MXQ-AS 6 (L)-X11	15					26.5									
MXQ 8 (L)	MXQ-AS 8 (L)	5	7	22	9	7.5	19.5	8	3	M6 x 1	M3 x 8	14.6	7	9.8	M3 x 10	
	MXQ-AS 8 (L)-X11	15					29.5									
	MXQ-AS 8 (L)-X12	25					39.5									
MXQ12 (L)	MXQ-AS12 (L)	5	9.5	29	14	11	23.5	12	4	M8 x 1	M4 x 12	18.5	10.5	12.7	M4 x 12	
	MXQ-AS12 (L)-X11	15					33.5									
	MXQ-AS12 (L)-X12	25					43.5									
MXQ16 (L)	MXQ-AS16 (L)	5	11	36	17	13.5	24.5	14	5	M10 x 1	M5 x 16	21	13	15	M5 x 16	
	MXQ-AS16 (L)-X11	15					34.5									
	MXQ-AS16 (L)-X12	25					44.5									
MXQ20 (L)	MXQ-AS20 (L)	5	13	45	20	16	27.5	17	6	M12 x 1.25	M6 x 16	25	16	18	M6 x 16	
	MXQ-AS20 (L)-X11	15					37.5									
	MXQ-AS20 (L)-X12	25					47.5									
MXQ25 (L)	MXQ-AS25 (L)	5	16	54	22	18	32.5	19	6	M14 x 1.5	M8 x 18	31	17	20	M8 x 18	
	MXQ-AS25 (L)-X11	15					42.5									
	MXQ-AS25 (L)-X12	25					52.5									

*1) Size of hexagon socket head cap screw
 *2) It is also available in the symmetric type.
 For "How to Order", refer to page 94.
 Dimensions are the same as standard type.

Retraction End

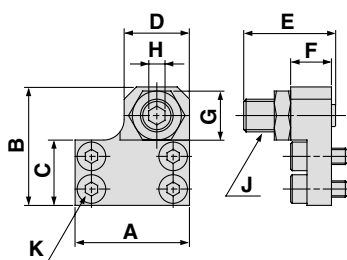

Applicable size	Model	Stroke adjustment range (mm)	A	B	C	D	E	F	G	H	J	K ^{*1)}
MXQ 6 (L)	MXQ-AT 6 (L)	5	17.5	19	10.5	8	16.5	6	7	2.5	M5 x 0.8	M2.5 x 6
	MXQ-AT 6 (L)-X11	15					26.5					
MXQ 8 (L)	MXQ-AT 8 (L)	5	21	22	12.5	10	19.5	8	8	3	M6 x 1	M3 x 8
	MXQ-AT 8 (L)-X11	15					29.5					
	MXQ-AT 8 (L)-X12	25					39.5					
MXQ12 (L)	MXQ-AT12 (L)	5	28	29	16	16	23.5	10	12	4	M8 x 1	M4 x 10
	MXQ-AT12 (L)-X11	15					33.5					
	MXQ-AT12 (L)-X12	25					43.5					
MXQ16 (L)	MXQ-AT16 (L)	5	33.5	35.5	20	17	24.5	12	14	5	M10 x 1	M5 x 12
	MXQ-AT16 (L)-X11	15					34.5					
	MXQ-AT16 (L)-X12	25					44.5					
MXQ20 (L)	MXQ-AT20 (L)	5	41	44.5	25	23	27.5	13	17	6	M12 x 1.25	M5 x 14
	MXQ-AT20 (L)-X11	15					37.5					
	MXQ-AT20 (L)-X12	25					47.5					
MXQ25 (L)	MXQ-AT25 (L)	5	49	53.5	31	28	32.5	15	19	6	M14 x 1.5	M6 x 18
	MXQ-AT25 (L)-X11	15					42.5					
	MXQ-AT25 (L)-X12	25					52.5					

*1) Size of hexagon socket head cap screw
 *2) It is also available in the symmetric type.
 For "How to Order", refer to page 94.
 Dimensions are the same as standard type.