



80156649

Edition 6

July 2015

Dual Action Sander

Model 311A

Product Information

EN Product Information	CS Specifikace výrobku
ES Especificaciones del producto	ET Toote spetsifikatsioon
FR Spécifications du produit	HU A termék jellemzői
IT Specifiche prodotto	LT Gaminio techniniai duomenys
DE Technische Produktdaten	LV Ierīces specifikācijas
NL Productspecificaties	PL Informacje Macje o Produkcje
DA Produktspecifikationer	BG Информация за продукта
SV Produktspecifikationer	RO Informații privind produsul
NO Produktspesifikasjoner	RU Технические характеристики изделия
FI Tuote-erittely	ZH 产品信息
PT Especificações do Produto	JA 製品仕様
EL Προδιαγραφές προϊόντος	KO 제품 상세
SL Specifikacije izdelka	HR Podaci o proizvodu
SK Špecifikácie produktu	



Save These Instructions

IR Ingersoll Rand®

Product Safety Information

Intended Use:

These Sanders are designed for smoothing and sanding paint, fiberglass, wood and body filler.

For additional information refer to Product Safety Information Manual Form 04580387.

Manuals can be downloaded from ingersollrandproducts.com

Product Specifications

Model(s)	Free Speed	Pad Diameter		Sound Level dB (A) (ISO15744)		Vibration m/s ² (ISO28927)	
	rpm	inch	mm	† Pressure (L _p)	‡ Power (L _w)	Level	*K
311A	12000	6	152	84.3	95.3	32.3	5.6

† K_{PA} = 3dB measurement uncertainty

* K = Vibration measurement uncertainty

‡ K_{WA} = 3dB measurement uncertainty



WARNING

Sound and vibration values were measured in compliance with internationally recognized test standards. The exposure to the user in a specific tool application may vary from these results. Therefore, on site measurements should be used to determine the hazard level in that specific application.

Installation and Lubrication

Size air supply line to ensure tool's maximum operating pressure (PMAX) at tool inlet. Drain condensate from valve(s) at low point(s) of piping, air filter and compressor tank daily. Install a properly sized Safety Air Fuse upstream of hose and use an anti-whip device across any hose coupling without internal shut-off, to prevent hose whipping if a hose fails or coupling disconnects. See drawing 16577231 and table on page 2. Maintenance frequency is shown in a circular arrow and defined as h=hours, d=days, and m=months of actual use. Items identified as:

- | | |
|-----------------------------|--------------------|
| 1. Air filter | 6. Thread size |
| 2. Regulator | 7. Coupling |
| 3. Lubricator | 8. Safety Air Fuse |
| 4. Emergency shut-off valve | 9. Oil |
| 5. Hose diameter | |

Parts and Maintenance

When the life of the tool has expired, it is recommended that the tool be disassembled, degreased and parts be separated by material so that they can be recycled.

Original instructions are in English. Other languages are a translation of the original instructions.

Tool repair and maintenance should only be carried out by an authorized Service Center.

Refer all communications to the nearest **Ingersoll Rand** Office or Distributor.