

B. Summary of components

All available end plate combinations are listed in the following tables. Check the end plates, which you wish to fit, with regard to compatibility, see Tab. B/6 to Tab. B/13:

End plate pairs for internal pilot air with pneumatic connections		Description
CPV10-EPL	CPV10-EPR-G	Ident. code U <ul style="list-style-type: none">– Connections only in the right-hand end plate– No pressure zone separation permitted– Not suitable for vacuum
CPV10-EPL-E	CPV10-EPR-G	Ident. code Y <ul style="list-style-type: none">– Connections in the left-hand and right-hand end plate– Pressure zone separation permitted– Maximum number of pressure zones: 3– Valves to the left of the separator plate are suitable for vacuum• Connections which are not required for the functioning of the valve terminal must be sealed (see also section 3.3.2 “Connecting the supply and work lines”).
CPV10-EPL-G	CPV10-EPR	Ident. code V <ul style="list-style-type: none">– Connections only in the left-hand end plate– No pressure zone separation permitted– Not suitable for vacuum