

Pressure transmitters SPTW

FESTO

Type codes

		SPTW	-	P10	R	-	G14	-	A	-	M12
Function											
SPTW	Pressure transmitter										
Pressure measuring range											
B2	-1 ... +1 bar										
B11	-1 ... +10 bar										
P2	0 ... 2 bar										
P6	0 ... 6 bar										
P10	0 ... 10 bar										
P16	0 ... 16 bar										
P25	0 ... 25 bar										
P50	0 ... 50 bar										
P100	0 ... 100 bar										
Pressure input											
R	Relative pressure										
Pneumatic connection											
G14	Female thread G1/4										
Electrical output											
A	4 ... 20 mA										
VD	0.1 ... 10 V										
Electrical connection											
M12	Plug M12x1, 4-pin										