


BS CHAIN FOR CORROSIVE ENVIRONMENTS

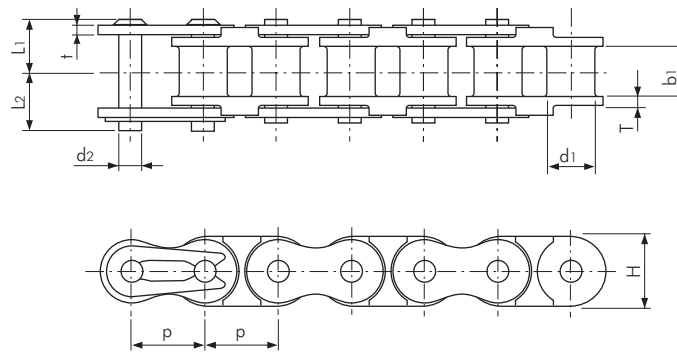

BS PC Chain

Dimensions in mm

[illegible]

Note:

1. Make sure to check the chain load again when replacing Stainless Steel Chain with PC Chain.
2. Offset links are not available.
3. Use a chain tensioner with an idler sprocket to adjust chain tension.
4. Guide rails should support the underside of the inner links.
5. For details on corrosion resistance selection, please consult our Corrosion Resistance Guide in this catalogue.