



Proper Combinations of Solenoid Valves, Gaskets & Manifold Base

**5 Port Body Ported Type
(NVJ3020)**

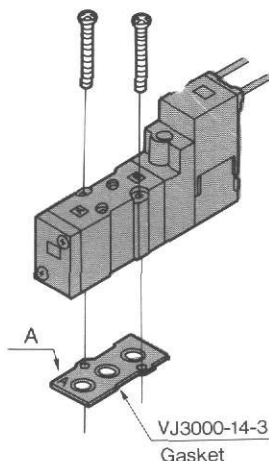


Applicable base
NVV5J3-20

**4 Port Base Mounted Type
(NVJ3030)**

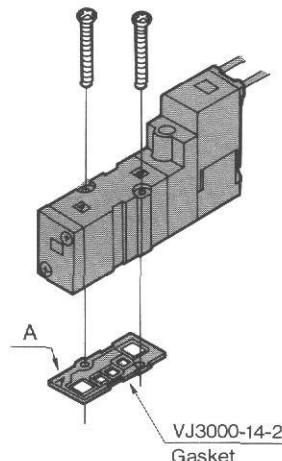

Applicable base
NVV5J3-31
NVV5J3-S31
NVV5J3-32
NVV5J3-S32


**5 Port Base Mounted Type
(NVJ3040)**

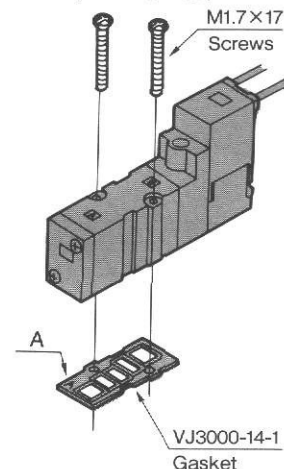

Applicable base
Subplate (VJ3000-22-1)
NVV5J3-41
NVV5J3-S41
NVV5J3-46
NVV5J3-S46


Proper Combination of Blank Plate Ass'y & Manifold Base

**Blank Plate Ass'y
VJ3000-21-2A**

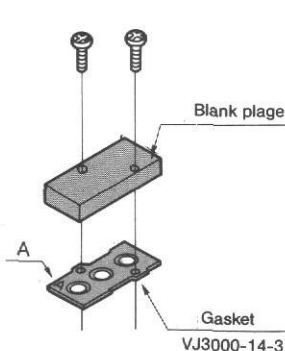

Applicable base
NVV5J3-20

**Blank Plate Ass'y
VJ3000-21-1A**

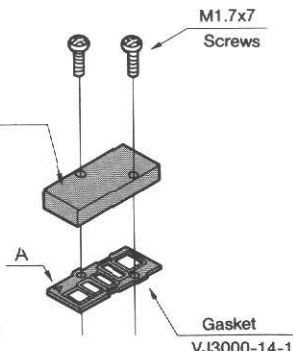


Applicable base
Subplate (VJ3000-22-1)
NVV5J3-41
NVV5J3-S41
NVV5J3-46
NVV5J3-S46
NVV5J3-31
NVV5J3-S31
NVV5J3-32
NVV5J3-S32

Note: Manifold gasket VJ3000-14-2 can be used with the following manifold bases.
NVV5J3-31
NVV5J3-S31
NVV5J3-32
NVV5J3-S32

Difference Between NVJ3030 and NVJ3040


**NVJ3030
(4 Port)**

A steel ball is struck into the body.

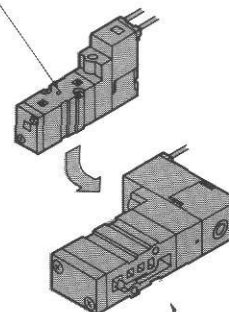


**NVJ3040
(5 Port)**

This face configuration is different.

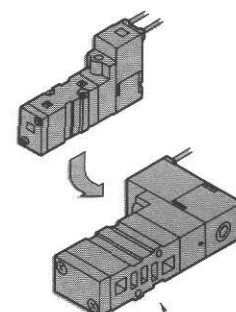

How to Mount Bracket (VJ3000-13-1)

①

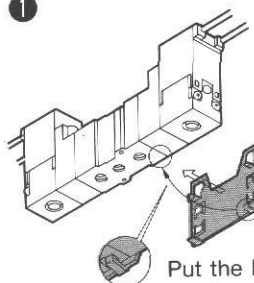

Put the lower part of the bracket together with the valve body, and then fit the hooks in the groove.

②

Put the hooks of the bracket in the groove of the body by pushing this part.

