


Operating instructions

97 51 10

EN **Crimping pliers for Western plugs**
for cutting and stripping unshielded telephone flat
cables and pressing 6- and 8-pin Western plugs

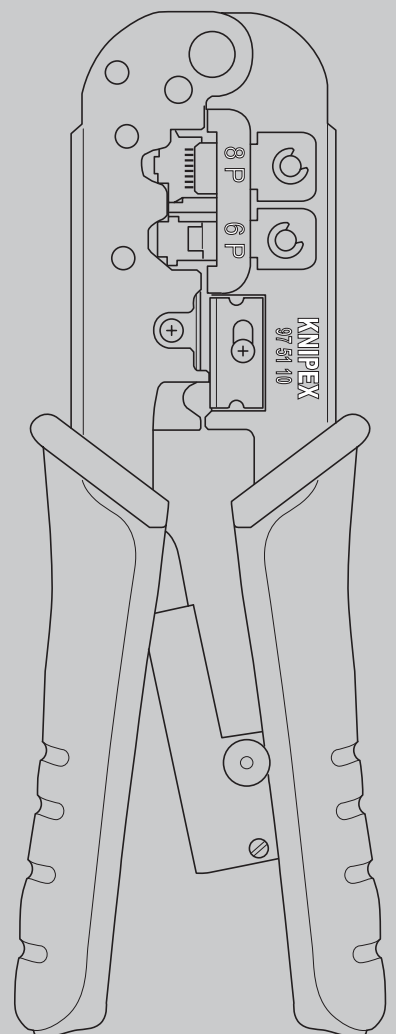


5 Maintenance

Oil the joint of the tool regularly.

5.1 Replacing the blades

1. Unscrew the screws at the blades.
2. Pull the lower blade out of its guide.

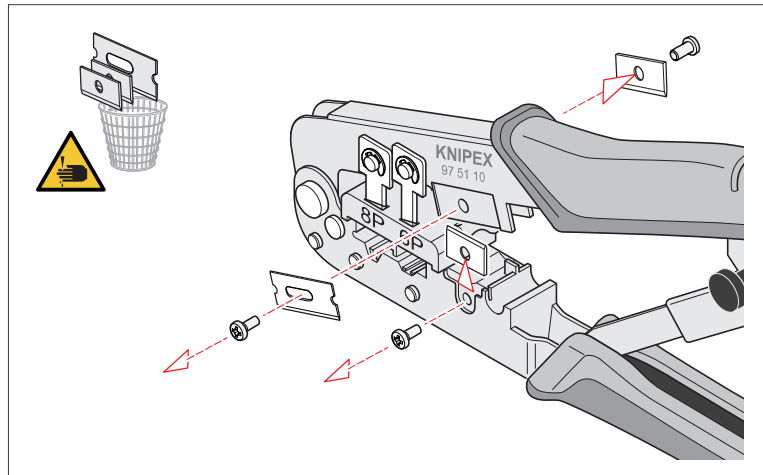

Changing blades

3. Dispose of the used blade properly.
4. Install the new blades in the reverse order.

6 Technical data

Technical data	Unit	
Article number	—	97 51 10
Article number spare blades (4 pieces)	—	97 59 06
Length	mm	190
Weight	g	340
Properties	—	Handles with multi-component grips
Application	—	Open Western plugs (6-pin, 8-pin)
Capacity		RJ 11/12 (6-pin) 9.65 mm; RJ 45 (8-pin) 11.68 mm

7 Disposal

The tool can be disposed of as household waste.