


Dimensions

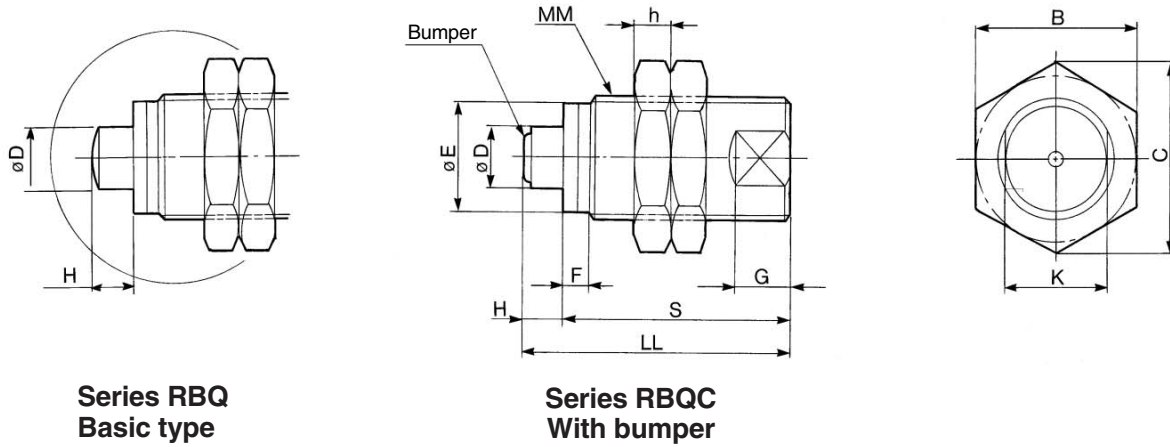


Series RBQ
Basic type

Series RBQC
With bumper

Model		Shock absorber									Hexagon nut		
Basic type	With bumper	D	E	F	H	K	G	LL	MM	S	B	C	h
RBQ1604	RBQC1604	6	14.2	3.5	4	14	7	31	M16 x 1.5	27	22	25.4	6
RBQ2007	RBQC2007	10	18.2	4	7	18	9	44.5	M20 x 1.5	37.5	27	31.2	6
RBQ2508	RBQC2508	12	23.2	4	8	23	10	52	M25 x 1.5	44	32	37	6
RBQ3009	RBQC3009	16	28.2	5	8.5	28	12	61.5	M30 x 1.5	53	41	47.3	6
RBQ3213	RBQC3213	18	30.2	5	13	30	13	76	M32 x 1.5	63	41	47.3	6

Hexagon Nut

(2 pcs. standard equipment)

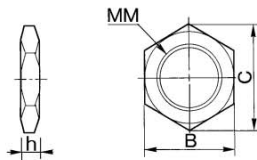


Part no.	MM	h	B	C
RBQ16J	M16 x 1.5	6	22	25.4
RB20J ⁽¹⁾	M20 x 1.5	6	27	31.2
RBQ25J	M25 x 1.5	6	32	37
RBQ30J	M30 x 1.5	6	41	47.3
RBQ32J	M32 x 1.5	6	41	47.3

Note 1) In the case of RB20J, RB and RBQ are common.

Option

Stopper nut

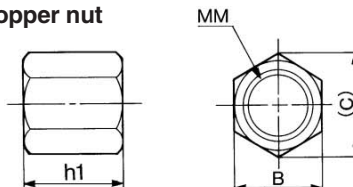


Part no.	B	C	h1	MM
RBQ16S	22	25.4	12	M16 x 1.5
RB20S ⁽²⁾	27	31.2	16	M20 x 1.5
RBQ25S	32	37	18	M25 x 1.5
RBQ30S	41	47.3	20	M30 x 1.5
RBQ32S	41	47.3	25	M32 x 1.5

Note 2) In the case of RB20S, RB and RBQ are common.

Replacement Parts

Bumper

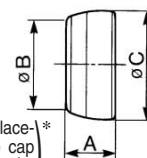

(These are the replacement part for the cap type. Not available for the basic type.)

Part no.	A	B	C
RBQC16C	3.5	4	4.7
RBQC20C	4.5	8	8.3
RBQC25C	5	8.3	9.3
RBQC30C	6	11.3	12.4
RBQC32C	6.6	13.1	14.4