



Manifold Options

■ For types 20, 23 Blanking plate assembly

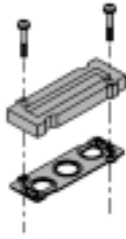

Series	Assembly part no.
SY3000	SY3000-26-9A-Q
SY5000	SY5000-26-18A-Q
SY7000	SY7000-26-20A-Q
SY9000	SY9000-26-1A-Q

■ Bolt, Gasket part numbers

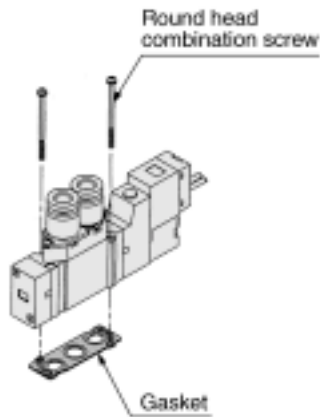


Series	Round head combination screw	Gasket
SY3000	SY3000-23-4 (M2 x 21)	SY3000-11-24
SY5000	M3 x 26 (Flat nickel plated)	SY5000-11-10
SY7000	M4 x 31 (Flat nickel plated)	SY7000-11-9
SY9000	SY9000-18-2 (M3 x 42)	SY9000-11-1

⚠ Caution

Mounting screw tightening torque


M2: 0.15N·m
M3: 0.6N·m
M4: 1.4N·m

■ For types 20P, 23P Blanking plate assembly

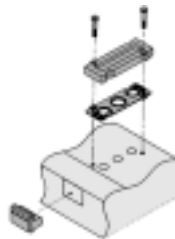

Series	Assembly part no.
SY3000	SY3000-26-10A-Q
SY5000	SY5000-26-19A-Q
SY7000	SY7000-26-21A-Q
SY9000	SY9000-26-3A-Q


■ Individual EXH spacer assembly

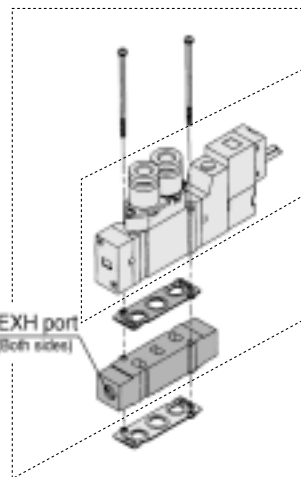

Series	Assembly part no.	Port size
SY3000	SY3000-39-20A	M5
SY5000	SY5000-39-1□A-Q	1/8
SY7000	SY7000-39-1□A-Q	1/4
SY9000	SY9000-39-1□A-Q	1/4

Note) In case of types 20P and 23P, to protect from drainage, arrange the piping on the EA port (wiring unit side) so that the wiring unit will not be exposed to the direct exhaust from the valve.

■ Individual SUP spacer assembly

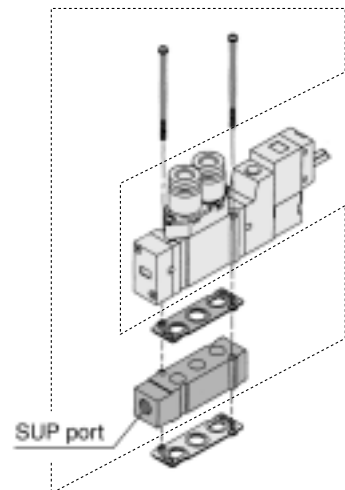


Series	Assembly part no.	Port size
SY3000	SY3000-38-20A	M5
SY5000	SY5000-38-1□A-Q	1/8
SY7000	SY7000-38-1□A-Q	1/4
SY9000	SY9000-38-1□A-Q	1/4

Note 1) The SUP port can be on the lead wire side or end plate side for SY3000/5000/7000. (The SUP port direction is as shown above when shipped already assembled.)

Note 2) For SY9000, the SUP port is only available on the end plate side.

■ Plug (white)

Insert into unused cylinder ports and SUP/EXH ports.
The minimum order quantity is 10 pieces. Order in multiples of 10.

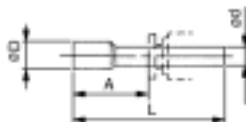

● Thread

—	Rc (PT)
N	NPT
T	NPTF
F	G (PF)

Dimensions

Applicable fitting size ød	Model	A	L	D
4	KQ2P-04	16	32	6
6	KQ2P-06	18	35	8
8	KQ2P-08	20.5	39	10
10	KQ2P-10	22	43	12
12	KQ2P-12	24	45.5	14