



<Manifold option>

Combinations of solenoid valve, manifold gasket and manifold base


**5 port body ported
(Type 10-SYJ3□23)**

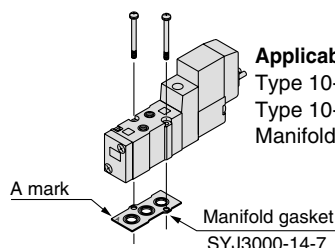

**4 port base mounted
(Type 10-SYJ3□33)**

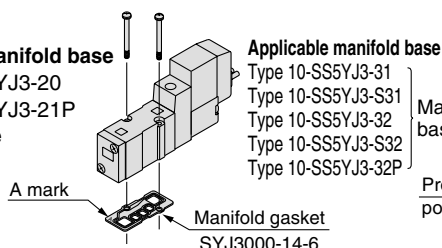

**5 port base mounted
(Type 10-SYJ3□43)**

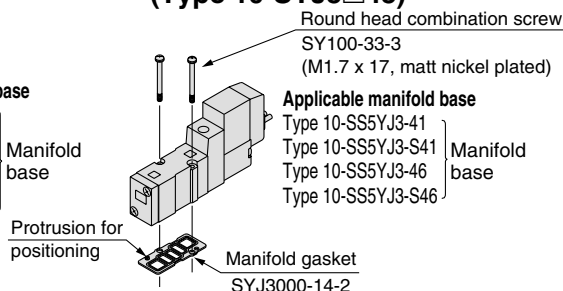


Note) Please insert the protrusion for positioning of the manifold gasket into the hole of the valve body completely.

Combination of blanking plate assembly and manifold base


Difference between types 10-SYJ3□33 and 10-SYJ3□43

**Blanking plate assembly
SYJ3000-21-1A**

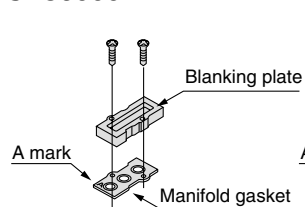

Applicable base
Type SS5YJ3-20 manifold base


**Blanking plate assembly
SYJ3000-21-2A**

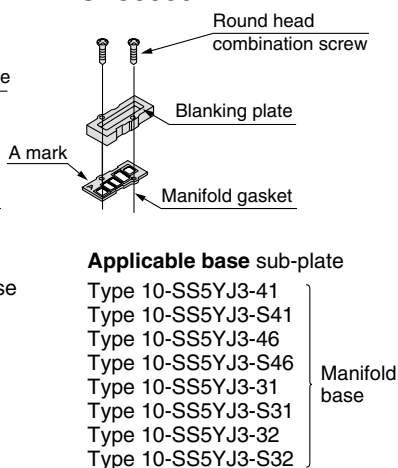


Note) The SYJ3000-14-2 manifold gasket can be used for 10-SS5YJ3-31/-S31 and 10-SS5YJ3-32/-S32 manifold bases.

Type 10-3□33 (4 port)

Type 10-3□43 (5 port)

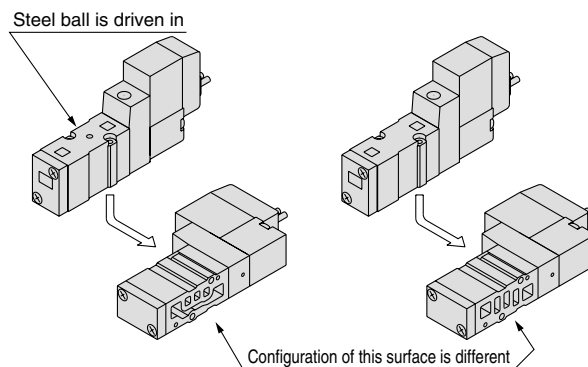


**Blanking plate assembly
SYJ3000-21-4A**

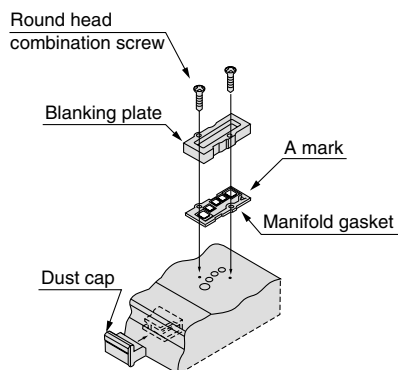

Applicable base
Type 10-SS5YJ3-32P manifold base

**Blanking plate assembly
SYJ3000-21-3A**

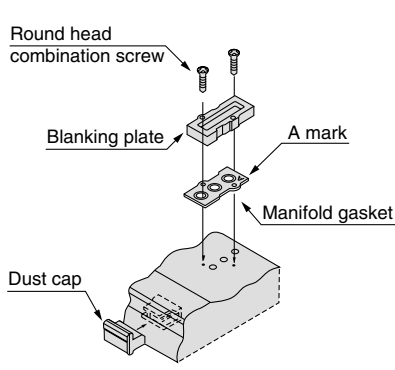

Applicable base
Type 10-SS5YJ3-21P manifold base

Caution

Mounting screw tightening torque

M1.7: 0.12N·m

Use caution to the assembly orientation for solenoid valves, gasket and option parts.