


Unit dimensions

Table 10: PSFT Silver-Lube® two-bolt flange - unit dimensions

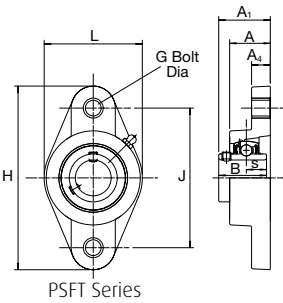


Shaft diameter		RHP designation	Basic bearing insert	Housing group	Dimensions (mm)		
mm	inches				L	H	J
20		PSFT20CR	J1020	2	64.1	113.3	90.0
	3/4	PSFT3/4CR	J1020	2	64.1	113.3	90.0
25		PSFT25CR	J1025	3	68.4	130.3	99.0
	1	PSFT1CR	J1025	3	68.4	130.3	99.0
30		PSFT30CR	J1030	4	80.1	148.3	117.0
	1 1/16	PSFT1 1/16CR	J1030	4	80.1	148.3	117.0
	1 1/4	PSFT1 1/4RCR	J1030	4	80.1	148.3	117.0
35		PSFT35CR	J1035	5	90.1	163.3	130.0
	1 1/4	PSFT1 1/4CR	J1035	5	90.1	163.3	130.0
	1 7/16	PSFT1 7/16CR	J1035	5	90.1	163.3	130.0
40		PSFT40CR	J1040	6	100.1	175.3	144.0
	1 1/2	PSFT1 1/2CR	J1040	6	100.1	175.3	144.0

All dimensions in mm except inch shaft sizes

Unit dimensions

Table 11: PST Silver-Lube® take up units - unit dimensions

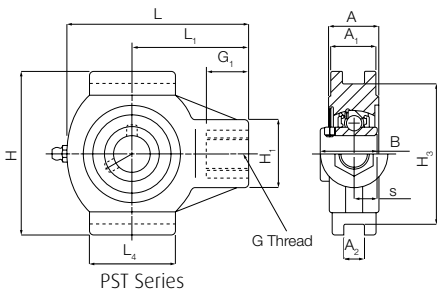

Shaft diameter		RHP designation	Basic bearing insert	Housing group	Dimensions (mm)				
mm	inches				L	L ₁	L ₄	H	H ₁
20		PST20CR	J1020	2	99.0	64.0	47.0	88.0	35.0
	¾	PST¾CR	J1020	2	99.0	64.0	47.0	88.0	35.0
25		PST25CR	J1025	3	99.0	64.0	47.0	88.0	35.0
	1	PST1CR	J1025	3	99.0	64.0	47.0	88.0	35.0
30		PST30CR	J1030	4	125.0	76.0	63.0	102.0	40.0
	1⅜	PST1⅜CR	J1030	4	125.0	76.0	63.0	102.0	40.0
	1¼	PST1¼RCR	J1030	4	125.0	76.0	63.0	102.0	40.0
35		PST35CR	J1035	5	125.0	76.0	63.0	102.0	40.0
	1¼	PST1¼CR	J1035	5	125.0	76.0	63.0	102.0	40.0
	1⅞	PST1⅞CR	J1035	5	125.0	76.0	63.0	102.0	40.0
40		PST40CR	J1040	6	140.0	85.0	80.0	114.0	40.0
	1½	PST1½CR	J1040	6	140.0	85.0	80.0	114.0	40.0

All dimensions in mm except inch shaft sizes