
Wear Resistant Tubing






Description	Maximum abrasion (mm)			
Description	After 10 million cycles			
Wear resistant tubing TUZ/TIUZB series	0.16			
Polyurethane tubing TU series	0.46			

Note) Comparison based on the SMC's specific testing condition

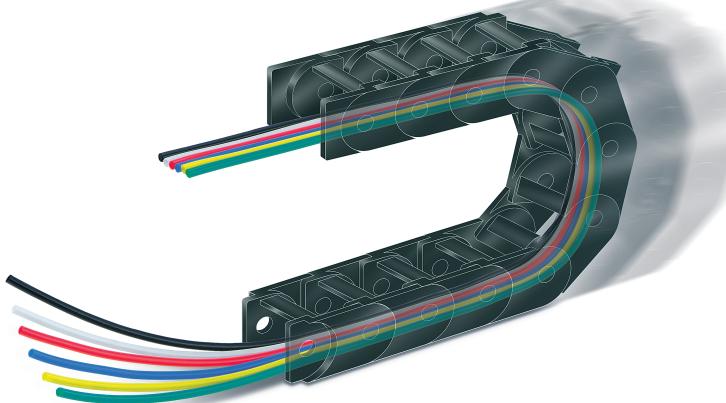

6-colour variations

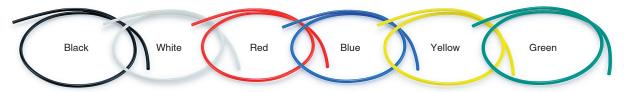

Metric: 8-size variations

 Inch: 3-size variations







Tubing O.D.: Ø 1/4 Ø 3/8 (Ø 6.35)

Ø 1/2 (Ø 12.7)


TUZ/TIUZB Series



Wear Resistant Tubing





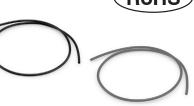

Model	● — 20 m roll □ — 100 m ro
MOGEL	■ — 20 m roll — 100 m r

		Tubing size									100 11110
				Metric size					Inch size (TIUZB series)		
Model	TUZ0212	TUZ3220	TUZ0425	TUZ0604	TUZ0805	TUZ1065	TUZ1208	TUZ1610	TIUZB07	TIUZB11	TIUZB13
Tubing O.D. [mm]	2	3.2	4	6	8	10	12	16	6.35	9.53	12.7
Tubing I.D. [mm]	1.2	2	2.5	4	5	6.5	8	10	4.23	6.35	8.46
Black (B) White (W) Red (R) Blue (BU)											
Yellow (Y) Green (G)									+	*	+
Specifications	_										


	·	Air/Water										
s		One-touch fittings KQ2 series, Insert fittings KF series, Stainless steel 316 insert fittings KFG2 series, Miniature fittings M/MS series (hose nipple type)										
20 °C		0.8										
40 °C		0.6										
60 °C		0.4										
Note 3) (kPa)		-101.3										
ote 4) (mm)	4	4 10 10 15 20 27 35 45 23 27 35						35				
ature	-20 to +60 °C (Water: 0 to 40 °C) (No freezing)											
		Special polyurethane										
	20 °C 40 °C 60 °C Note 3) (kPa)	20 °C 40 °C 60 °C Note 3) (kPa) ote 4) (mm) 4	20 °C 40 °C 60 °C Note 3) (kPa) 20e 4) (mm) 4 10	Insert Miniat 20 °C 40 °C 60 °C Note 3) (kPa) 2004 4) (mm) 4 10 10	Insert fittings KF Miniature fittings	Insert fittings KF series, Miniature fittings M/MS s	One-touch fittings KQ2 series, Insert fittings KF series, Stainless Miniature fittings M/MS series (he 20 °C 40 °C 60 °C Note 3) (kPa)	One-touch fittings KQ2 series, Insert fittings KF series, Stainless steel 3 Miniature fittings M/MS series (hose nipp 20 °C 0.8 40 °C 0.6 60 °C 0.4 Note 3) (kPa) -101.3 704 4) (mm) 4 10 10 15 20 27 ature -20 to +60 °C (Water: 0 to 40)	One-touch fittings KQ2 series, Insert fittings KF series, Stainless steel 316 insert fit Miniature fittings M/MS series (hose nipple type) 20 °C 0.8 40 °C 0.6 60 °C 0.4 Note 3) (kPa) -101.3 -20 to +60 °C (Water: 0 to 40 °C) (No free	One-touch fittings KQ2 series, Insert fittings KF series, Stainless steel 316 insert fittings KFG2 Miniature fittings M/MS series (hose nipple type) 20 °C 0.8 40 °C 0.6 60 °C 0.4 Note 3) (kPa) -101.3 70te 4) (mm) 4 10 10 15 20 27 35 45 ature -20 to +60 °C (Water: 0 to 40 °C) (No freezing)	One-touch fittings KQ2 series, Insert fittings KF series, Stainless steel 316 insert fittings KFG2 series, Miniature fittings M/MS series (hose nipple type) 20 °C 0.8 40 °C 0.6 60 °C 0.4 Note 3) (kPa) -101.3 Tota 4) (mm) 4 10 10 15 20 27 35 45 23 Tature -20 to +60 °C (Water: 0 to 40 °C) (No freezing)	One-touch fittings KQ2 series, Insert fittings KF series, Stainless steel 316 insert fittings KFG2 series, Miniature fittings M/MS series (hose nipple type) 20 °C 0.8 40 °C 0.6 60 °C 0.4 Note 3) (kPa) -101.3 Tota 4) (mm) 4 10 10 15 20 27 35 45 23 27 -20 to +60 °C (Water: 0 to 40 °C) (No freezing)

Note 1) Applicable for general industrial water. Please consult with SMC if using other kinds of fluid. Surge pressure must be under the max. operating pressure. If the surge pressure exceeds the maximum operating pressure, it will result in damage to fittings and tubes. Note 2) Abnormal temperature rise caused by adiabatic compression may result in the tube bursting.

Note 3) As the operating vacuum pressure varies depending on the applicable fittings, be sure to check the fitting specifications beforehand.


Note 4) The minimum bending radius means the value measured by the method shown in the figure at the right at the temperature of 20 °C when the tube is bent. The minimum bending radius assumes static piping. If the tube is used in a moving part, provide extra length to the tube. Check the bending radius recommended by the flexible protection tube manufacturer for sure if the tube is used in the flexible protection tube.

Max. Operating Pressure

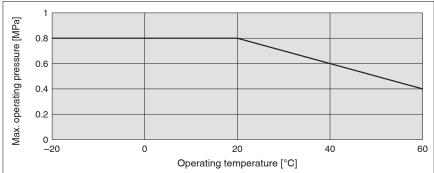

How to Order

How to Calculate Minimum Bending Radius

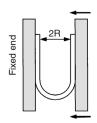


Bend the tube into U-form at the temperature of 20 °C. Fix one end and close loop gradually. Measure 2R when the tube breaks or is crushed.

TUZ0425 BU - 20								
Tubing model •	Symbol	Olour •		Symbol	gth per roll Length			
	В	Black		20	20 m roll			
	W	White		100	100 m roll			
	R	Red						
	BU	Blue						
	Υ	Yellow						
	G	Green						

Reference Data: Abrasion due to Flexible Protection Tube

Test Conditions

Test tube	TUZ0604, TU0604
Quantity of tube tested	5 pcs. for each
Operating speed	1500 mm/sec
Operating frequency	90 c.p.m
Stroke L	500 mm
Bending radius R	28 mm
Material of flexible protection tube	Special engineering plastic
Tube tie	Not used

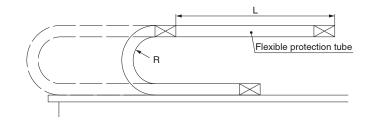


Test Results

Model	Maximum abrasion after 10 million cycles [mr				
TUZ0604	0.16				
TU0604	0.46				

As this test was an acceleration test, the tube bending radius was out of the flexible protection tube manufacturer's allowable range.

When the flexible protection tube is used in the actual application, check the manufacturer's catalogue specifications.

The values in the table above are representative values, and not guaranteed.

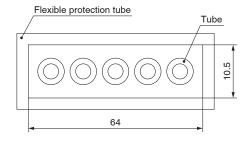

Tube dimensions inside the flexible protection tube

Made to Order

Multi-core, same colour specification TFU-X73 Flat type of the TUZ series

Number of cores: 2 to 12 cores Specification: Same colour


Multi-core, multi-colour specification TUZ-X169 to X172, -X204

Number of cores: 2 to 12 cores Specification: **Multi-colour** Refer to page 3 for details.

The identification line is not shown.

Please contact SMC for detailed specifications, dimensions, and delivery.

How to Order

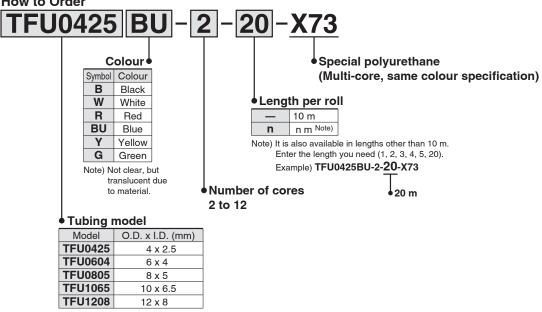



Wear Resistant Flat Tubing Multi-core, Multi-colour Specification

TUZ Series






Compact piping possible 6 colour variations Abrasion: Approx. 1/3

Compared with SMC polyurethane tubing TU series (Refer to the table below)

Description	Maximum abrasion [mm]		
Description	After 10 million cycles		
Wear resistant tubing TUZ series	0.16		
Polyurethane tubing TU series	0.46		

Note) Comparison based on the SMC's specific testing condition

Max. Operating Pressure

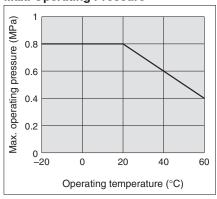

↑ Precautions

Be sure to read this before handling the products.
Refer to back page for Safety Instructions.

⚠ Caution

- Please consult with SMC if using for any fluids other than air.
- 2. As a result of product design characteristics, there are cases of very slight leakage.

How to measure the minimum bending radius



Bend the tube into a U shape at a temperature of 20 °C. Fix one end and bend the loop gradually. Measure 2R when the tube breaks or is crushed.

Specifications

Min. bending radius Note 3) [mm]

Operating temperature

<u> </u>		T1170405	T1170004	T	T1174005	T1174000					
Mode	I	TUZ0425	TUZ0604	TUZ0805	TUZ1065	TUZ1208					
Tubing O.D	Tubing O.D. [mm]		6	8	10	12					
Tubing I.D.	[mm]	2.5	4	5	6.5 8						
Black (B)		<u> </u>				•					
White (W)			+ + + + + + + + + + + + + + + + + + + 								
Red (R)						•					
Blue (BU)						•					
Yellow (Y)		•	•	•		•					
Green (G)		•	•	•	•	•					
	2 cores	X169 (Roll)									
Number of	3 cores	X170 (Roll)									
cores	4 cores	X171 (Roll)									
coles	5 cores	X172 (Roll)									
	6 cores			X204 (Roll)							
Fluid Note 1)		Air									
Max. operating	20 °C	0.8									
pressure	40 °C	0.6									
MPa	60 °C			0.4							
Applicable fitt	ings	One-touch	One-touch fitting, Insert fitting, Miniature fitting (Hose nipple type)								
Operating vacuum pres	sure Note 2) [kPa]	-101.3									

Note 1) Abnormal temperature rise caused by adiabatic compression may result in the tube bursting. Note 2) As the operating vacuum pressure varies depending on the applicable fittings, be sure to check the

15

20

-20 to +60 °C Special polyurethane

- Note 2) As the operating vacuum pressure varies depending on the applicable fittings, be sure to check the fitting specifications beforehand.Note 3) The minimum bending radius means the value measured by the method shown in the figure on the
- left below at the temperature of 20 °C when the tube is bent. The minimum bending radius assumes static piping. If the tube is used in a moving part, provide extra length to the tube. Check the bending radius recommended by the flexible protection tube manufacturer for sure if the tube is used in the flexible protection tube.


Wear Resistant Flat Tubing Multi-core, Multi-colour Specification TUZ Series

How to Order




Please contact SMC for delivery.


Tube length per roll: 1, 2, 3, 4, 5, 10, 20 m

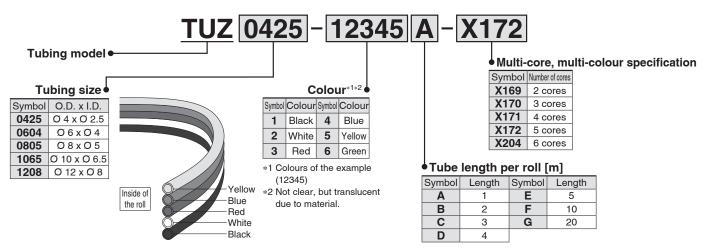

Tube length per roll: 50 m

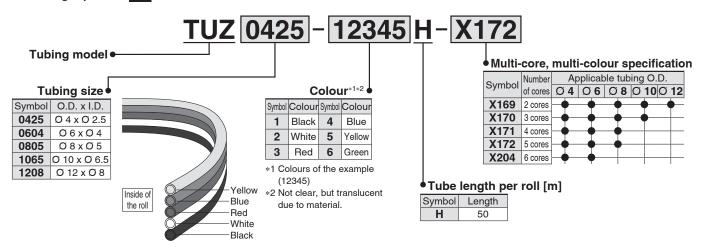

Tube length per roll: 100 m

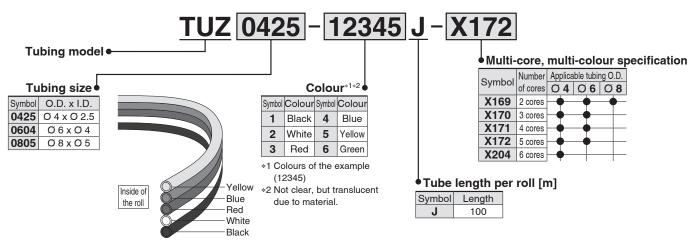



TUZ/TIUZB Series Specific Product Precautions

Be sure to read this before handling the products. Refer to back page for Safety Instructions.

Selection

⚠ Warning

1. Confirm the specifications.

Products represented in this catalogue are designed only for use with compressed air system applications (including vacuum). Do not use at pressure or temperature beyond the range of specifications, as this can cause damage or malfunction. (Refer to the specifications.)

2. In case of using the product for medical care

This product is designed for use with compressed air system applications for medical care purposes. Do not use in transfer applications to a human living body, or in contact with human bodily fluids, body tissues.

⚠ Caution

1. Do not use in locations where the connecting threads and tube connection will slide or rotate.

The connecting threads and tube connection will come apart under these conditions.

Use rotary type one-touch fittings (KS, KX series) in cases where sliding or rotation will occur.

- Use the tube at or above the minimum bending radius. Using below the minimum bending radius can cause breakage or flattening of the tube.
- Never use the tube for anything flammable, explosive or toxic such as gas, fuel gas, or cooling mediums, etc.

Because the contents may penetrate outward.

4. Use the suitable fittings for the tube size.

Mounting

⚠ Caution

- Confirm model number, size, etc. before installing.
 Check if there is damage, gouge, crack, etc. on the tube.
- 2. When the tube is connected, consider factors such as changes in the tubing length due to pressure, and allow sufficient leeway.
- 3. Do not apply unnecessary forces such as twisting, pulling, moment loads, etc. on fittings and tube.

This will cause damage to fittings or flattening, bursting or disconnection of tube, etc.

4. Mount so that tube is not damaged due to tangling.

This will cause flattening, bursting or disconnection of tube, etc.

Piping

⚠ Caution

1. Preparation before piping

Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil and other debris from inside the pipe. Not allowing chips of the piping thread or the seal material to go in. The minimum bending radius assumes static piping. If the tube is used in a moving part, provide extra length to the tube. Check the bending radius recommended by the flexible protection tube manufacturer for sure if the tube is used in the flexible protection tube.

Air Supply

△ Warning

1. Types of fluid

This product is designed for use with compressed air.

2. In case of excessive condensation

Excessive condensation in compressed air may cause malfunction of pneumatic devices. Installation of an air dryer, water separator before filter is recommended.

3. Drain flushing

If condensation in the drain bowl of an air filter is not emptied on a regular basis, the condensation will enter the outlet side, causing malfunction of pneumatic devices.

If the drain flushing is difficult, installation of a filter with an auto drain option is recommended.

For compressed air quality, refer to SMC's "Air Preparation Equipment Model Selection Guide."

Operating Environment

⚠ Warning

- 1. Do not use in locations having an explosive atmosphere.
- Do not operate in locations where vibration or impact occurs.
- 3. In locations near heat sources, block off radiated heat.

Maintenance

Caution

- Perform periodic inspections to check the following problems and replace the tube, if necessary.
 - a) Cracks, gouges, wearing, corrosion
 - b) Air leakage
 - c) Twists or crushing of tube
 - d) Hardening, deterioration, softening of tube
- Do not repair or patch the replaced tube or fittings for reuse.



⚠ Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC) 1, and other safety regulations.

Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate

injury.

Warning indicates a hazard with a medium level of risk⚠ Warning: which, if not avoided, could result in death or serious

njury.

Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious

njury.

ISO 4414: Pneumatic fluid power – General rules relating to systems.
 ISO 4413: Hydraulic fluid power – General rules relating to systems.
 IEC 60204-1: Safety of machinery – Electrical equipment of machines.
 (Part 1: General requirements)

ISO 10218-1: Manipulating industrial robots - Safety. etc.

∧ Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

3. Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.

- The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
- When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
- 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions

- Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
- 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalogue.
- 3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
- 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

⚠ Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary. If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".Read and accept them before using the product.

Limited warranty and Disclaimer

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first. ²⁾ Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.
- 2) Vacuum pads are excluded from this 1 year warranty. A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements


- The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

⚠ Caution

SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country.

Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

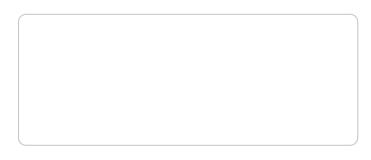

SMC Corporation (Europe)

Austria +43 (0)2262622800 www.smc.at Belgium +32 (0)33551464 Bulgaria +359 (0)2807670 +385 (0)13707288 www.smc.hr Croatia Czech Republic +420 541424611 Denmark +45 70252900 Estonia +372 651 0370 Finland +358 207513513 France +33 (0)164761000 www.smc-france.fr Germany +49 (0)61034020 Greece +30 210 2717265 Hungary +36 23513000 Ireland +353 (0)14039000 Italy +39 03990691 Latvia +371 67817700

www.smc.be www.smc.bg www.smc.cz www.smcdk.com www.smcee.ee www.smc.fi www.smc.de www.smchellas.gr www.smc.hu www.smcautomation.ie www.smcitalia.it www.smc.lv

office@smc.at info@smc.be office@smc.bg office@smc.hr office@smc.cz smc@smcdk.com info@smcee.ee smcfi@smc.fi supportclient@smc-france.fr info@smc.de sales@smchellas.gr office@smc.hu sales@smcautomation.ie mailbox@smcitalia.it info@smc.lv

Lithuania +370 5 2308118 www.smclt.lt **Netherlands** +31 (0)205318888 www.smc.nl Norway www.smc-norge.no +47 67129020 +48 222119600 www.smc.pl Poland Portugal +351 214724500 www.smc.eu Romania +40 213205111 www.smcromania.ro Russia +7 (812)3036600 www.smc.eu Slovakia +421 (0)413213212 www.smc.sk Slovenia +386 (0)73885412 www.smc.si Spain +34 945184100 www.smc.eu Sweden +46 (0)86031240 www.smc.nu **Switzerland** +41 (0)523963131 www.smc.ch +90 212 489 0 440 www.smcturkey.com.tr Turkey UK +44 (0)845 121 5122 www.smc.uk

info@smclt.lt info@smc.nl post@smc-norge.no office@smc.pl apoioclientept@smc.smces.es smcromania@smcromania.ro sales@smcru.com office@smc.sk office@smc si post@smc.smces.es smc@smc.nu info@smc.ch info@smcturkey.com.tr sales@smc.uk

South Africa +27 10 900 1233 zasales@smcza.co.za www.smcza.co.za