### **How to Order**

## *Series ZPT* Without buffer

ZPT 02 U N A5

Pad d	<b>3507</b> 3.5 x 7									
	(mm) ↓									
2004	2 x 4									
3507	3.5 x 7									
4010	4 x 10									
02	ø2									
04	ø4									
06	ø6									
08	ø8									
10	ø10									
13	ø13									
16	ø16									
20	ø20									
25	ø25									
32	ø32									
40	ø40									

ø50

Vacuum entry/Mounting thread diameter

Connection	Symbol	Thread diameter	ø2 to ø8 2 x 4, 3.5 x 7, 4 x 10 ø10 to ø16 (Thin section series)	ø10 to ø16	ø20 to ø32	ø40, ø50
ag g	A5	M5 x 0.8	•	•	_	
Male thread	A6	M6 x 1	•	•	•	•
≥ ≑	A8	M8 x 1	_	_	•	•
	B4	M4 x 0.7	•	_	-	_
ص <u>چ</u>	B5	M5 x 0.8	•	•	•	_
Female thread	B6	M6 x 1	_	•	•	•
五章	B8	M8 x 1.25	_	_	•	•
	B01	Rc 1/8	_	•	•	•
		, 0	I .			I

Material

N	NBR
S	Silicon rubber
U	Urethane rubber
F	Fluoro rubber
GN *	Conductive NBR (ø2 to ø16)
GS*	Conductive silicon rubber (ø2 to ø16)

\* Ø20 and larger are manufactured upon a receipt of order.

ZX

ZR

ZM

ZH

ZU

ZL

ZQ

ZF

ZΡ

ZCU

AMJ

Misc.

Pad type •

(Refer to "Table (1)" for applications.)

50

U	Flat
С	Flat with ribs
D	Deep
В	Bellows
UT	Thin flat
СТ	Thin flat with ribs

Table (1) Pad Diameter/Pad Type

						<i>,</i>									
Type Diameter	2 x 4	3.5 x 7	4 x 10	2	4	6	8	10	13	16	20	25	32	40	50
Flat	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Flat with ribs	_	_	_	_	_	_	_	•	•	•	•	•	•	•	
Deep	_	_	_	_	_	—	_	•	—	•	_	•	_	•	_
Bellows	_	_	_	_	_	•	•	•	•	•	•	•	•	•	•
Thin flat	_	_	_		_	_	_	•	•	•	_	<b>—</b>	_	_	_
Thin flat with ribs	_	_	_	_	_	_	_	•	•	•	_	_	_	-	_

# **⚠** Precautions

Be sure to read before handling. Refer to pages 13-15-3 to 13-15-4 for Safety Instructions and Common Precautions on the products mentioned in this catalog, and refer to page 13-1-5 for Precautions on every series.

### **Coution on Design**

# △ Warning

 In cases where workpieces are heavy or dangerous, etc., take measures to address a possible loss of adsorption force (installation of drop prevention guides, etc.).

In the case of transportation by vacuum adsorption using vacuum pads, adsorption force is lost when there is a drop in vacuum pressure. Furthermore, since vacuum pressure can also deteriorate due to wear and cracking of pads, and vacuum leakage from piping, etc., be certain to perform maintenance on vacuum equipment.

### Selection

### **⚠** Caution

1. The pad materials differ depending upon the operating environment.

An appropriate pad material should be selected. Furthermore, since vacuum pads are manufactured for use with industrial products, they should not have direct contact with pharmaceuticals or food products, etc.

2. Depending upon the weight and shape of the workpieces, the diameter, quantity and shape of pads will vary.

Use the pad lifting force table for reference. Also, the pads selected will differ based upon conditions other than the above, such as the condition of the workpiece surface (presence or absence of oil or water), the workpiece material and its gas permeability. Confirmation is necessary by actually performing vacuum adsorption testing on the subject workpieces.

3. Use a buffer for adsorption on fragile workpieces.

The cushioning by the buffer is necessary when there is variation in the height of workpieces. When further positioning of pads and workpieces is desired, a detent buffer can be used.

- 4. The life of a buffer will be reduced if the lateral force is applied to the buffer shaft. Note that sometimes a load is applied to the buffer by a piping tube (pulling or pressing, etc. in a lateral direction).
- 5. Do not apply an impact or large forces to a pad when adsorbing a workpiece.

This will cause deformation, cracking and wear of the pad to be accelerated. The stiffening ribs, etc. should touch lightly, while staying within the pad skirt's deformation range. Positioning should be performed accurately. Especially in the case of small diameter pads.

6.When transporting in an upward direction, factors such as acceleration, wind pressure and impact force must be considered in addition to a workpiece weight.

Use caution particularly when lifting items such as glass plates and circuit boards, because a large force will be applied by the wind pressure. When a workpiece which is oriented vertically is transported horizontally, large forces are applied by acceleration when movement is started and stopped. Further, in cases where the pad and a workpiece can slip easily, accelerations and decelerations of horizontal movement should be kept low.

When transporting flat workpieces that have large surface areas using multiple pads, care must be taken when arranging the pads to balance the workpiece.

### Maintenance

### **⚠** Caution

1. Perform pad maintenance regularly.


Since pads are essentially rubber, deterioration is unavoidable. The rate of deterioration depends upon factors such as conditions of use, environment and temperature. Regular maintenance should be performed. If any damage, splitting, cracking or abrasion has occurred in a pad which appears to be harmful, replace it immediately. Also, take care not to damage the outside of the pad.




# Series ZPT

 
 Connection
 Male thread
 Pad Form
 Flat/Flat with ribs/Deep/Thin flat/ Thin flat with ribs/Elliptic

 Vacuum Entry Port
 Vertical
 Mounting
 Use connection for vacuum

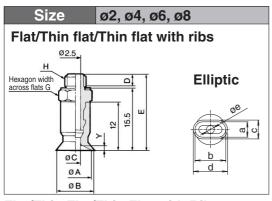

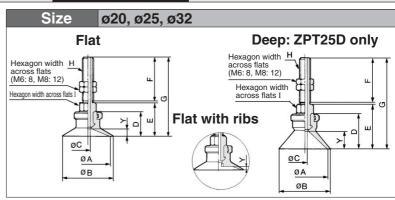

### Flat/Thin Flat/Thin Flat with Ribs

Model	øΑ	øΒ	øС	H: I	M5 x	8.0	H:	M6 >	<b>( 1</b>	v
Model	ØA	ØB	٥٥	D	Е	G	D	Е	G	T
ZPT02U	2	2.6	1.2							
ZPT04U	4	4.8	1.6							0.8
ZPT06U	6	7								
ZPT08U	8	9								4
ZPT10UT	10	11		3	19	7	4	20	8	<u>'</u>
ZPT13UT	13	14	2.5	3	13	,	-	20	0	1.5
ZPT16UT	16	17	2.5							1.5
ZPT10CT	10	11								0.8
ZPT13CT	13	14								4
ZPT16CT	16	17								<u>'</u>

### Flat/Flat with Ribs

Model	øΑ	øΒ	D	H: M6 x 1					H: M8 x 1					Υ		
Model	ØA.	ا ا		øС	Е	F	G	_	øС	Е	F	G	ı	Flat	Flat with ribs	
ZPT20 C	20	23	14													1.7
ZPT25 C	25	28	14	3	19	25	45	8	3.5	24	15	40	12	4	1.8	
ZPT32 C	32	35	14.5		19.5		45.5			24.5		40.5		4.5	2.3	


#### Deep


Model	øΑ	øΒ	n		H:	M6 x	<b>k</b> 1			H:	M8 x	<b>( 1</b>		v
Model		حاق ا	, ו	øС	Е	F	G	- 1	øС	Е	F	G	-	T
ZPT25D	25	28	20	3	25	25	51	8	3.5	30	15	46	12	10

### **Elliptic**

Model	а	b	C	d	øe	Υ
ZPT2004U	2	4	2.6	4.6	1.2	0.3
ZPT3507U	3.5	7	4.3	7.8	1.8	0.5
ZPT4010U	4	10	5	11	2	0.8

\* Dimensions of D, E, G are the same.

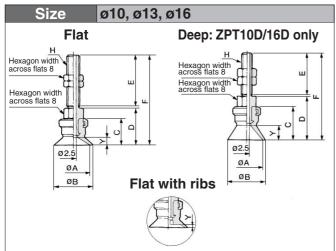

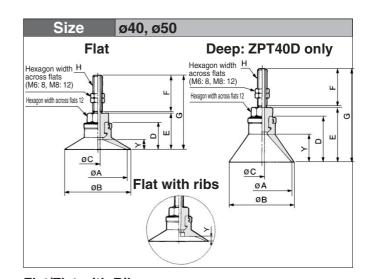

## Flat/Flat with Ribs

	A				H: M5 x 0.8		H: M	6 x 1	Υ		
Model	øΑ	øΒ	С		E	F	E	F	Flat	Flat with ribs	
ZPT10 C	10	12	12	17	20	38		40	0	1.7	
ZPT13 C	13	15					25	43	3	1.8	
ZPT16 C	16	18	12.5	17.5		38.5		43.5	3.5	1.2	

## Flat/Flat with Ribs

Madal	۰.	øΒ	_	n =		M6 2	<b>(</b> 1	H: M8 x 1			Υ		
Model	øΑ	ØВ	ט	_	øС	F	G	øС	F	G	Flat	Flat with ribs	
ZPT40 C	40	43	18.5	24.5	c	Q.E.	50.5	4.5	15	40.5	6.5	3.3	
ZPT50 C	50	53	19.5	25.5	3	25	51.5		15	41.5	7.5	3.8	

## Deep

N4I - I	~^	~D		_	H: M5 x 0.8		H: M5 x 0.8		H: M	v
Model	øΑ	øΒ	С	D	E	F	Е	F	T	
ZPT10D	10	12	15	20	20	41	25	46	6	
ZPT16D	16	18	16	21	20	42	25	47	7	

#### Deep

Model	øΑ	øΒ	D	E	H: M6 x 1			H: M8 x 1			V
					øС	F	G	øС	F	G	1
ZPT40D	40	43	29	35.5	3	25	61	4.5	15	51	17

